

OPERATION AND PARTS MANUAL



***Mikasa* SERIES**
MODEL MVC-88GE/GEW
ONE-WAY PLATE COMPACTOR
(ROBIN GASOLINE ENGINE)

Revision #1 (1/10/11)

THIS MANUAL MUST ACCOMPANY THE EQUIPMENT AT ALL TIMES.

Multiquip —MVC-88GE/GEW Plate Compactor

Table Of Contents	4
Parts Ordering Procedures	5
Safety Information	6-10
Specifications (Compactor/Engine)	12
General Information	13
Components (Plate Compactor)	14
Components (Engine)	15
Inspection	16-17
Operation	18-19
Maintenance	20-22
Preparation For Long Term Storage	23
Troubleshooting (Engine)	24-25
Troubleshooting (Plate Compactor)	25
Explanation Of Codes In Remarks Column	26
Suggested Spare Parts	27


ROBIN EX170D40050 Engine

Air Cleaner Assembly	38-39
Camshaft Assembly	40-41
Carburetor Assembly	42-43
Crankcase Assembly	44-45
Crankshaft and Piston Assembly	46-47
Cylinder Head Assembly	48-49
Fuel Tank Assembly	50-51
Governor Assembly	52-53
Ignition and Flywheel Assembly	54-55
Muffler Assembly	56-57
Recoil Starter Assembly	58-59

Terms and Conditions Of Sale — Parts	60
--	----

Component Drawings

Nameplate and Decals	28-29
Body Assembly	30-31
Vibrator Assembly	32-33
Sprinkler Assembly (Option)	34-35
Transport Wheel Assembly (Option)	36-37

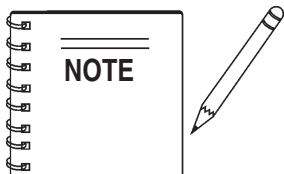

***Specification and part number
are subject to change without
notice.***

MVC-88GE/GEW PLATE COMPACTOR — SAFETY INFORMATION

Do not operate or service the equipment before reading the entire manual. Safety precautions should be followed at all times when operating this equipment. Failure to read and understand the safety messages and operating instructions could result in injury to yourself and others.



SAFETY MESSAGES

The four safety messages shown below will inform you about potential hazards that could injure you or others. The safety messages specifically address the level of exposure to the operator and are preceded by one of four words: **DANGER**, **WARNING**, **CAUTION** or **NOTICE**.

SAFETY SYMBOLS



DANGER

Indicates a hazardous situation which, if not avoided, **WILL** result in **DEATH** or **SERIOUS INJURY**.



WARNING

Indicates a hazardous situation which, if not avoided, **COULD** result in **DEATH** or **SERIOUS INJURY**.



CAUTION

Indicates a hazardous situation which, if not avoided, **COULD** result in **MINOR** or **MODERATE INJURY**.

NOTICE

Addresses practices not related to personal injury.

Potential hazards associated with the operation of this equipment will be referenced with hazard symbols which may appear throughout this manual in conjunction with safety messages.

Symbol	Safety Hazard
	Lethal exhaust gas hazards
	Explosive fuel hazards
	Burn hazards
	Respiratory hazards
	Accidental starting hazards
	Eye and hearing hazards
	Rotating parts hazards

MVC-88GE/GEW PLATE COMPACTOR — SAFETY INFORMATION

GENERAL SAFETY

⚠ CAUTION

- **NEVER** operate this equipment without proper protective clothing, shatterproof glasses, respiratory protection, hearing protection, steel-toed boots and other protective devices required by the job or city and state regulations.



- **NEVER** operate this equipment when not feeling well due to fatigue, illness or when under medication.



- **NEVER** operate this equipment under the influence of drugs or alcohol.



- **ALWAYS** check the equipment for loosened threads or bolts before starting.
- **DO NOT** use the equipment for any purpose other than its intended purposes or applications.
- **ALWAYS** clear the work area of any debris, tools, etc. that would constitute a hazard while the equipment is in operation.

NOTICE

- This equipment should only be operated by trained and qualified personnel 18 years of age and older.
- Whenever necessary, replace nameplate, operation and safety decals when they become difficult read.
- Manufacturer does not assume responsibility for any accident due to equipment modifications. Unauthorized equipment modification will void all warranties.
- **NEVER** use accessories or attachments that are not recommended by Multiquip for this equipment. Damage to the equipment and/or injury to user may result.
- **ALWAYS** know the location of the nearest **fire extinguisher**.
- **ALWAYS** know the location of the nearest **first aid kit**.
- **ALWAYS** know the location of the nearest phone or **keep a phone on the job site**. Also, know the phone numbers of the nearest **ambulance**, **doctor** and **fire department**. This information will be invaluable in the case of an emergency.



MVC-88GE/GEW PLATE COMPACTOR — SAFETY INFORMATION

COMPACTOR SAFETY

DANGER

- **NEVER** operate the equipment in an explosive atmosphere or near combustible materials. An explosion or fire could result causing severe bodily harm or even death.



WARNING

- **NEVER** disconnect any **emergency or safety devices**. These devices are intended for operator safety. Disconnection of these devices can cause severe injury, bodily harm or even death. Disconnection of any of these devices will void all warranties.

CAUTION

- **NEVER** lubricate components or attempt service on a running machine.

NOTICE

- **ALWAYS** keep the machine in proper running condition.
- Fix damage to machine and replace any broken parts immediately.
- **ALWAYS** store equipment properly when it is not being used. Equipment should be stored in a clean, dry location out of the reach of children and unauthorized personnel.

ENGINE SAFETY

DANGER

- The engine fuel exhaust gases contain poisonous carbon monoxide. This gas is colorless and odorless, and can cause death if inhaled.
- The engine of this equipment requires an adequate free flow of cooling air. **NEVER** operate this equipment in any enclosed or narrow area where free flow of the air is restricted. If the air flow is restricted it will cause injury to people and property and serious damage to the equipment or engine.



WARNING

- **DO NOT** place hands or fingers inside engine compartment when engine is running.
- **NEVER** operate the engine with heat shields or guards removed.
- Keep fingers, hands hair and clothing away from all moving parts to prevent injury.
- **DO NOT** remove the radiator cap while the engine is hot. High pressure boiling water will gush out of the radiator and severely scald any persons in the general area of the compactor.
- **DO NOT** remove the coolant drain plug while the engine is hot. Hot coolant will gush out of the coolant tank and severely scald any persons in the general area of the compactor.
- **DO NOT** remove the engine oil drain plug while the engine is hot. Hot oil will gush out of the oil tank and severely scald any persons in the general area of the compactor.



CAUTION

- **NEVER** touch the hot exhaust manifold, muffler or cylinder. Allow these parts to cool before servicing equipment.



NOTICE

- **NEVER** run engine without an air filter or with a dirty air filter. Severe engine damage may occur. Service air filter frequently to prevent engine malfunction.
- **NEVER** tamper with the factory settings of the engine or engine governor. Damage to the engine or equipment can result if operating in speed ranges above the maximum allowable.
- **NEVER** tip the engine to extreme angles during lifting as it may cause oil to gravitate into the cylinder head, making the engine start difficult.




MVC-88GE/GEW PLATE COMPACTOR — SAFETY INFORMATION

FUEL SAFETY

DANGER

- **DO NOT** add fuel to equipment if it is placed inside truck bed with plastic liner. Possibility exists of explosion or fire due to static electricity.

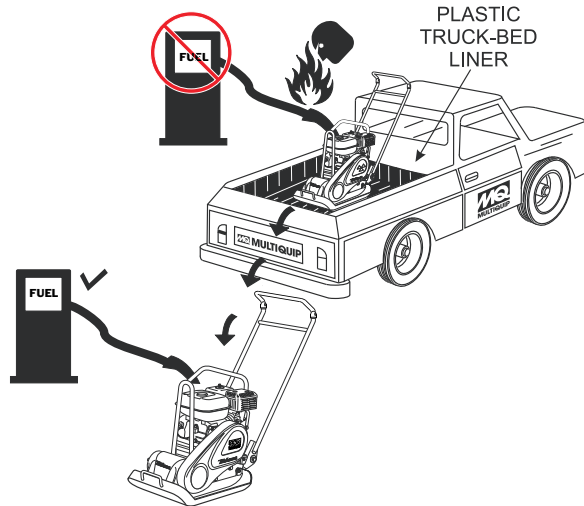


- **DO NOT** start the engine near spilled fuel or combustible fluids. Diesel fuel is extremely flammable and its vapors can cause an explosion if ignited.
- **ALWAYS** refuel in a well-ventilated area, away from sparks and open flames.
- **ALWAYS** use extreme caution when working with **flammable** liquids.
- **DO NOT** fill the fuel tank while the engine is running or hot.
- **DO NOT** overfill tank, since spilled fuel could ignite if it comes into contact with hot engine parts or sparks from the ignition system.
- Store fuel in appropriate containers, in well-ventilated areas and away from sparks and flames.
- **NEVER** use fuel as a cleaning agent.
- **DO NOT** smoke around or near the equipment. Fire or explosion could result from fuel vapors or if fuel is spilled on a hot engine.



BATTERY SAFETY (ELECTRIC START ONLY)

DANGER

- **DO NOT** drop the battery. There is a possibility that the battery will explode.
- **DO NOT** expose the battery to open flames, sparks, cigarettes, etc. The battery contains combustible gases and liquids. If these gases and liquids come into contact with a flame or spark, an explosion could occur.

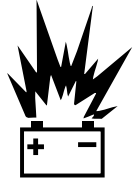

WARNING

- **ALWAYS** wear safety glasses when handling the battery to avoid eye irritation. The battery contains acids that can cause injury to the eyes and skin.
- Use well-insulated gloves when picking up the battery.
- **ALWAYS** keep the battery charged. If the battery is not charged, combustible gas will build up.
- **DO NOT** charge battery if frozen. Battery can explode. When frozen, warm the battery to at least 61°F (16°C).
- **ALWAYS** recharge the battery in a well-ventilated environment to avoid the risk of a dangerous concentration of combustible gases.
- If the battery liquid (dilute sulfuric acid) comes into contact with **clothing or skin**, rinse skin or clothing immediately with plenty of water.
- If the battery liquid (dilute sulfuric acid) comes into contact with **eyes**, rinse eyes immediately with plenty of water and contact the nearest doctor or hospital to seek medical attention.



CAUTION

- **ALWAYS** disconnect the **NEGATIVE** battery terminal before performing service on the equipment.
- **ALWAYS** keep battery cables in good working condition. Repair or replace all worn cables.

MVC-88GE/GEW PLATE COMPACTOR — SAFETY INFORMATION

TRANSPORTING SAFETY

CAUTION

- NEVER allow any person or animal to stand underneath the equipment while lifting.

NOTICE

- Before lifting, make sure that the equipment parts (hook and vibration insulator) are not damaged and screws are not loose or missing.
- Always make sure crane or lifting device has been properly secured to the lifting bail (hook) of the equipment.
- **ALWAYS** shutdown engine before transporting.
- **NEVER** lift the equipment while the engine is running.
- Tighten fuel tank cap securely and close fuel cock to prevent fuel from spilling.
- Use adequate lifting cable (wire or rope) of sufficient strength.
- Use one point suspension hook and lift straight upwards.
- **DO NOT** lift machine to unnecessary heights.
- **ALWAYS** tie down equipment during transport by securing the equipment with rope.

ENVIRONMENTAL SAFETY

NOTICE

- Dispose of hazardous waste properly. Examples of potentially hazardous waste are used motor oil, fuel and fuel filters.
- **DO NOT** use food or plastic containers to dispose of hazardous waste.
- **DO NOT** pour waste, oil or fuel directly onto the ground, down a drain or into any water source.



MVC-88GE/GEW PLATE COMPACTOR — SPECIFICATIONS

TABLE 1. Specifications (Compactor)

Models	MVC-88GE/MVC-88GEW
Centrifugal Force	3,450 lbs. (1,564.9 kg)
Number of Vibrations	5,800 vibrations/min
Traveling Speed (GE) Traveling Speed (GEW)	82 ft./min (25 meters/min) 72 ft./min (22 meters/min)
Plate Size (W x L) (GE) Plate Size (W x L) (GEW)	19.7 x 20.7 in. (50 x 53 cm) 17 x 22.4 in. (43 x 57 cm)
Operating Weight	163 lbs. (74 kg.)
Water Tank Capacity (GEW Model Only)	13.7 qt. (13.0 liters)
Max. Area Of Compaction	7092 sq. ft./hr.

Table 2. ENGINE SPECIFICATIONS

Engine	Model	ROBIN EX170D40050
	Type	Air-cooled 4 stroke, Single Cylinder, Overhead Camshaft Gasoline Engine
	Displacement	169 cc.
	Max Output	5.7 H.P./4,000 R.P.M.
	Continuous Output	4.0 H.P./3,600 R.P.M.
	Fuel Tank Capacity	Approx. .95 U.S. gallons (3.6 liters)
	Fuel	Unleaded Automobile Gasoline
	Lube Oil Capacity	.634 qts. (0.6 liters)
	Spark Plug	NGK BR-6HS (Champion RL86C)
Dimension (L x W x H)		11.97 x 13.94 x 13.19 in. (304 x 354 x 335 mm)
Dry Net Weight		33 lbs. (15 Kg.)

MVC-88GE/GEW PLATE COMPACTOR — GENERAL INFORMATION

Definition of Plate Compactor

The Mikasa MVC-88GE/GEW is a walk behind, plate compactor designed for the compaction of sand, mixed soils and asphalt. This plate compactor is a powerful compacting tool capable of applying a tremendous force in consecutive high frequency vibrations to a soil surface. Its applications include compacting for road, embankments and reservoirs as well as backfilling for gas pipelines, water pipelines and cable installation work.

Vibratory Plates

The vibratory plates of the MVC-88GE/GEW produce low amplitude high frequency vibrations, designed to compact granular soils and asphalt.

The resulting vibrations cause forward motion. The engine and handle are vibration isolated from the vibrating plate.

Frequency/Speed

The compactor's vibrating plate has a frequency range between 5800 vpm (vibrations per minute). The forward and reverse travel speed of the compactor is approximately 23 meters/minute (75 ft./minute).

Engine

The Mikasa MVC-88GE/GEW Plate Compactor is equipped with an EX170D40050 Robin engine. The engine drives an eccentric weight at a high speed to develop a compaction force. Always be sure to check the engine oil level prior to starting the engine.

Controls

Before starting the MVC-88GE/GEW Plate Compactor identify and understand the functions of the controls and components.

MVC-88GE/GEW PLATE COMPACTOR — COMPONENTS (COMPACTOR)

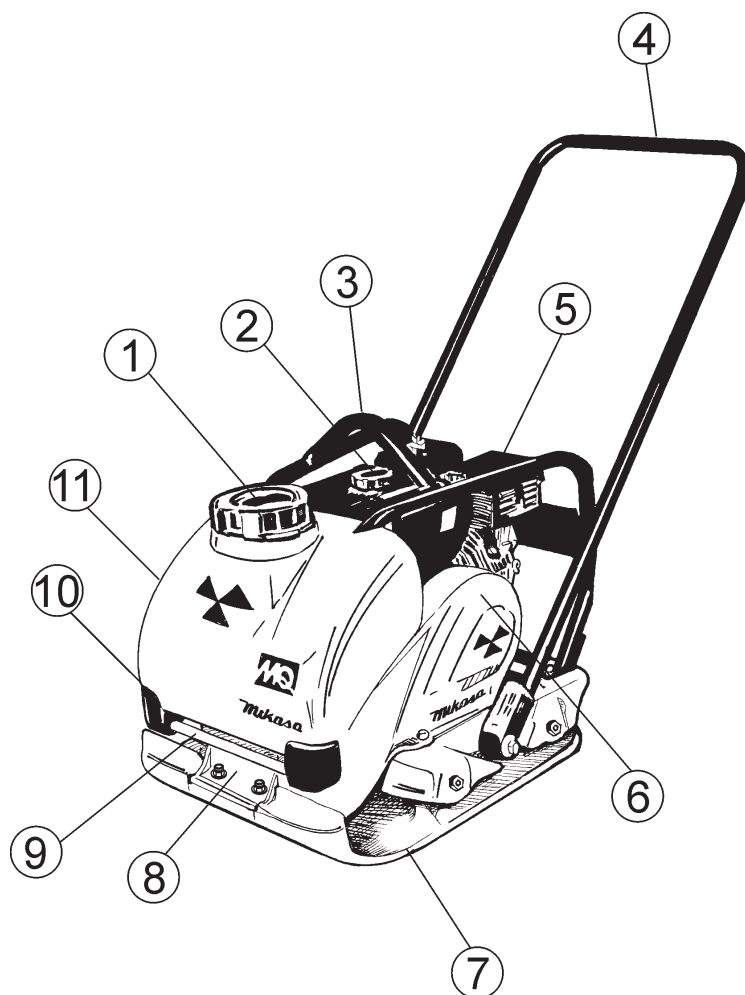


Figure 1. Plate Compactor Controls

Figure 1 shows the location of the basic controls and components of the MVC-88GE/GEW Plate Compactor. The function of each control is described below:

1. **Water Tank Cap (GEW only)** – Remove this cap to add water to the water tank.
2. **Fuel Tank Cap** – Remove this cap to add fuel.
3. **Lifting Bale** – When lifting of the compactor is required either by forklift, crane etc., tie rope or chain around this lifting point.
4. **Handle Bar** – When operating the compactor use this handle bar to maneuver the compactor.
5. **Gasoline Engine** – This plate compactor uses an EX170D40050 Robin engine. Refer to the ROBIN owner's manual for engine information and related topics.
6. **Belt Cover** – Remove this cover to gain access to the V-belt. **NEVER** run the compactor without the V-belt cover. If the V-belt cover is not installed, the possibility exists that your hand may get caught between the V-belt and clutch, thus causing serious injury and bodily harm.
7. **Vibrating Plate** – A flat, open plate made of durable cast iron construction used in the compacting of soil.
8. **Vibration Case** – Encloses the eccentric, gears and counter weights.
9. **Water Tube (Sprinkler)** – Supplies water to the soil via a splash plate.
10. **Water Shut-Off Valve** – Turn this valve downward to let water flow from the water tank to the water tube.
11. **Water Tank (GEW only)** – Holds 13.7 quarts of water, removable no tools required.

MVC-88GE/GEW PLATE COMPACTOR — COMPONENTS (ROBIN ENGINE)

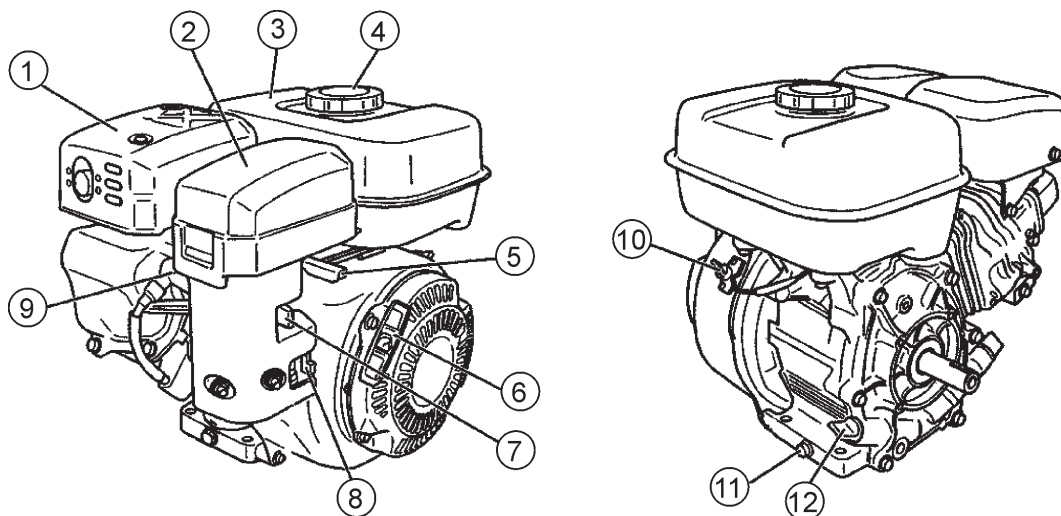


Figure 2. Engine Controls and Components

INITIAL SERVICING

The engine (Figure 2) must be checked for proper lubrication and filled with fuel prior to operation. Refer to the **ROBIN** engine service manual for instructions and details for proper operation and servicing.

1. **Muffler** – Used to reduce noise and emissions.



WARNING

Engine components can generate extreme heat. To prevent burns, **DO NOT** touch these areas while the engine is running or immediately after operating. **NEVER** operate the engine with the muffler removed.


2. **Air Cleaner** – Prevents dirt and other debris from entering the fuel system. Remove wing-nut on top of air filter canister to gain access to filter element.
3. **Fuel Tank** – Holds unleaded gasoline. For additional information refer to ROBIN engine owner's manual.
4. **Fuel Filler Cap** – Remove this cap to add unleaded gasoline to the fuel tank. Make sure cap is tightened securely. **DO NOT** over fill.



DANGER

Adding fuel to the tank should be done only when the engine is stopped and has had an opportunity to cool down. In the event of a fuel spill, **DO NOT** attempt to start the engine until the fuel residue has been completely wiped up, and the area surrounding the engine is dry.

5. **Throttle Lever** – Used to adjust engine RPM speed (lever advanced forward **SLOW**, lever back toward operator **FAST**).
6. **Recoil Starter (pull rope)** – Manual-starting method. Pull the starter grip until resistance is felt, then pull briskly and smoothly.
7. **Choke Lever** – Used in the starting of a cold engine, or in cold weather conditions. The choke enriches the fuel mixture.
8. **Fuel Valve Lever** – **OPEN** to let fuel flow, **CLOSE** to stop the flow of fuel.
9. **Spark Plug** – Provides spark to the ignition system. Set spark plug gap to 0.6 - 0.7 mm (0.028 - 0.031 inch) Clean spark plug once a week.
10. **Engine ON/OFF Switch** – ON position permits engine starting, OFF position stops engine operations.
11. **Oil Drain Plug** – Remove this plug to drain engine oil from the crankcase.
12. **Oil Dipstick/ Filler Cap** – Remove the filler cap dipstick when checking the engine oil level. Add engine oil through this filler port. See Table 3 for recommended type engine oil.

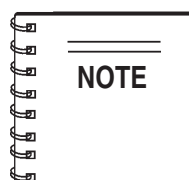

Operating the engine without an air filter, with a damaged air filter, or a filter in need of replacement will allow dirt to enter the engine, causing rapid engine wear.


MVC-88GE/GEW PLATE COMPACTOR — INSPECTION

CAUTION

NEVER operate the compactor in a confined area or enclosed area structure that does not provide ample **free flow of air**.



ALWAYS wear approved eye and hearing protection before operating the compactor.

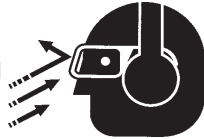

Before Starting

1. Read safety instructions at the beginning of manual.
2. Clean the compactor, removing dirt and dust, particularly the engine cooling air inlet, carburetor and air cleaner.
3. Check the air filter for dirt and dust. If air filter is dirty, replace air filter with a new one as required.
4. Check carburetor for external dirt and dust. Clean with dry compressed air.
5. Check fastening nuts and bolts for tightness. Loosened screws or bolts due to vibration, could lead to unexpected accidents.



Engine Oil Check

1. To check the engine oil level, place the compactor on secure level ground with the engine stopped.
2. Remove the filler dipstick from the engine oil filler hole (Figure 3) and wipe clean.

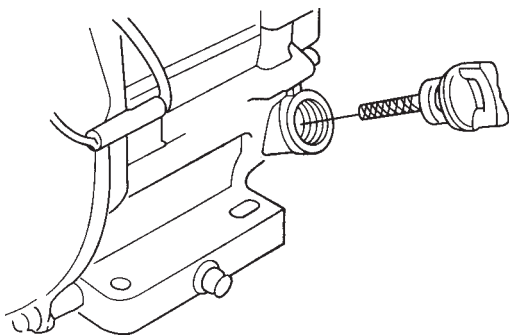


Figure 3. Engine Oil Dipstick (Removal)

3. Insert and remove the dipstick without screwing it into the filler neck. Check the oil level shown on the dipstick.
4. If the oil level is low (Figure 4), fill to the edge of the oil filler hole with the recommended oil type (Table 3). Maximum oil capacity is 0.63 quarts (0.60 liters).

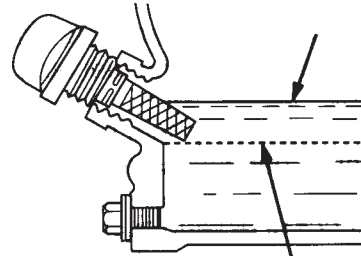


Figure 4. Engine Oil Dipstick (Oil Level)

Table 3. Oil Type

Season	Temperature	Oil Type
Summer	25°C or Higher	SAE 10W-30
Spring/Fall	25°C~10°C	SAE 10W-30/20
Winter	0°C or Lower	SAE 10W-10

DANGER

Explosive Fuel Hazard

Adding fuel to the fuel tank should be done only when the engine is stopped and has had an opportunity to cool down. In the event of a fuel spill, **DO NOT** attempt to start the engine until the fuel residue has been completely wiped up, and the area surrounding the engine is dry. **DO NOT** attempt to refuel the compactor if the engine is **hot!** or **running**.



Fuel Check

1. Remove the gasoline cap located on top of fuel tank.
2. Visually inspect to see if the fuel level is low. If fuel is low, replenish with unleaded fuel.
3. When refueling, be sure to use a strainer for filtration. **DO NOT** top-off fuel. Wipe up any spilled fuel **immediately!**

MVC-88GE/GEW PLATE COMPACTOR — INSPECTION

V-Belt Check

CAUTION

NEVER attempt to check the V-belt with the engine running. Severe injury can occur if your hand (Figure 5) gets caught between the V-belt and the clutch. Always use safety gloves.

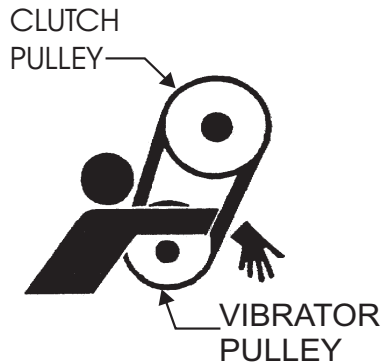


Figure 5. V-Belt Hazard

1. To check the V-belt tension, remove the three bolts that secure the belt cover to the frame as shown in Figure 6.

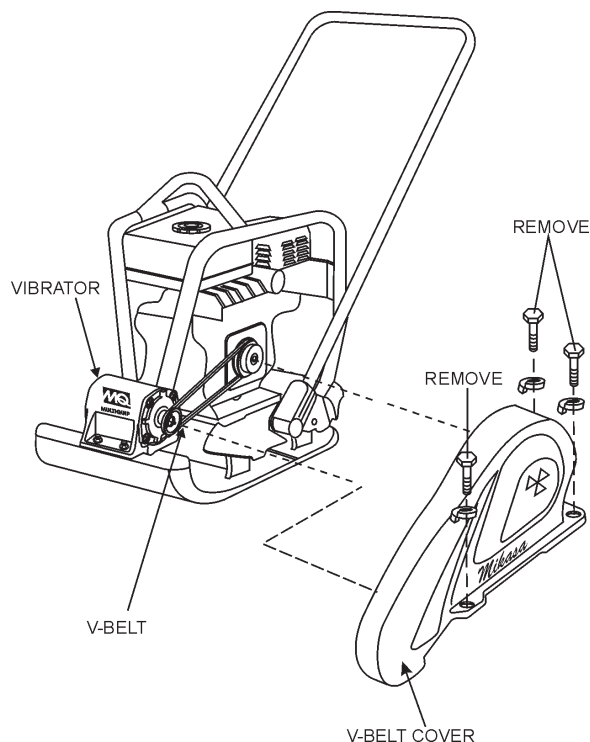


Figure 6. V-Belt Cover Removal

2. The V-belt tension is proper if the V-belt bends 10 to 15 mm (Figure 7) when depressed with finger at midway between the clutch and vibration pulley shafts.

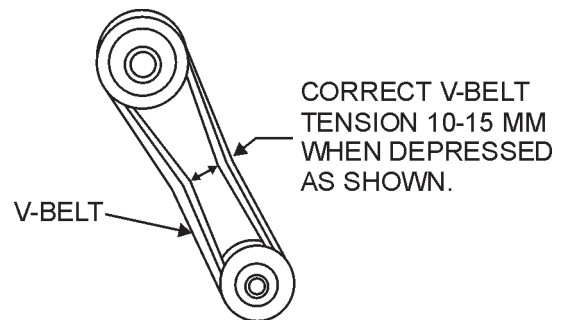


Figure 7. V-Belt Tension

3. A loose V-belt will decrease the power transmission output, causing reduced compaction and premature wear of the belt.
4. If the V-belt becomes worn or loose, replace it.

Vibrator Oil Check

1. Place the MVC-88GE/GEW plate compactor horizontally on a flat surface. Make sure the compactor is level when checking the oil in the vibrator assembly.
2. Check vibrator oil level by removing the plug (vibrator oil gauge) as shown in Figure 8. The oil level should be up to the oil plug. The vibrator holds 140 cc (approximately 4 oz.). **IMPORTANT**, if oil is required, replace using only SAE 10W-30 motor oil.

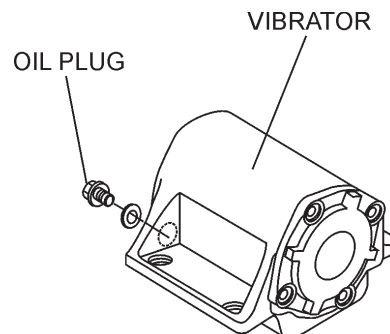


Figure 8. Vibrator Oil Plug

MVC-88GE/GEW PLATE COMPACTOR — OPERATION

CAUTION - Read Instructions

DO NOT attempt to operate the equipment until the Safety, General Information and Inspection sections of this manual have been **read and thoroughly understood**.



This section is intended to assist the operator with the **initial start-up**. It is extremely important that this section be read carefully before attempting to use the equipment in the field.

Starting the Engine

1. Place the engine **fuel valve lever** (Figure 9) to the "**ON**" position.

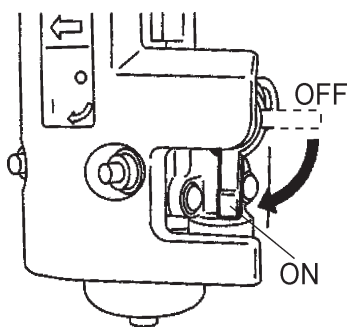


Figure 9. Engine Fuel Valve Lever (ON Position)

2. Move the **throttle lever** (Figure 10) away from the slow position, about 1/3 of the way toward the fast position.

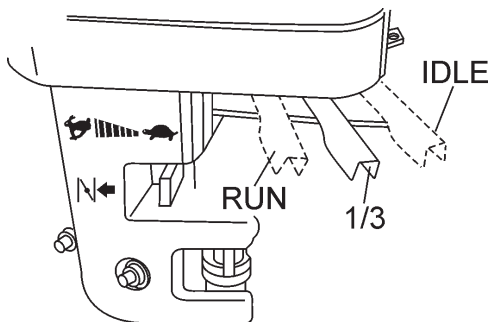


Figure 10. Throttle Lever (1/3 Start Position)

3. Place the **choke lever** (Figure 11) in the "**CLOSED**" position if starting a **cold** engine.

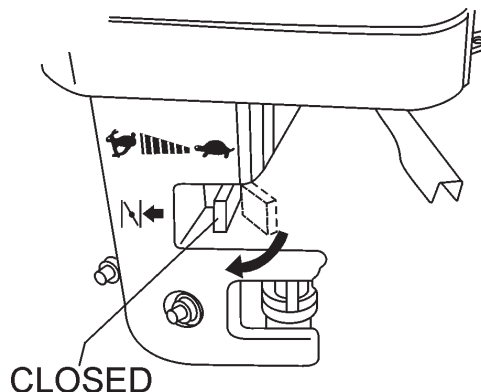


Figure 11. Engine Choke Lever (Closed)

4. Place the **choke lever** (Figure 12) in the "**OPEN**" position if starting a **warm engine** or the **temperature is warm**.

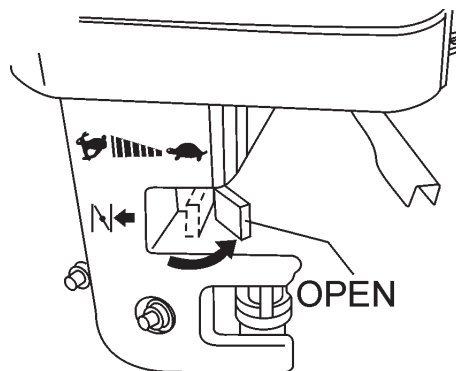


Figure 12. Engine Choke Lever (Open)

5. Place the **engine ON/OFF switch** (Figure 13) in the "**ON**" position.

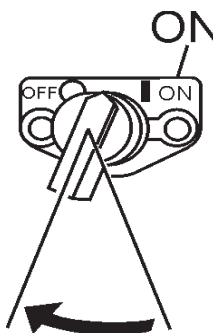


Figure 13. Engine ON/OFF Switch (ON Position)

MVC-88GE/GEW PLATE COMPACTOR — OPERATION

6. Grasp the starter grip (Figure 14) and slowly pull it out. The resistance becomes the hardest at a certain position, corresponding to the compression point. Pull the starter grip briskly and smoothly for starting.

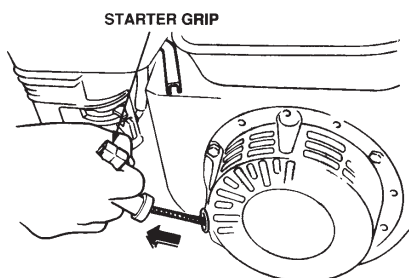


Figure 14. Starter Grip

7. If the engine has started, slowly return the choke lever (Figure 15) to the “**OPEN**” position. If the engine has not started repeat steps 1 through 6.

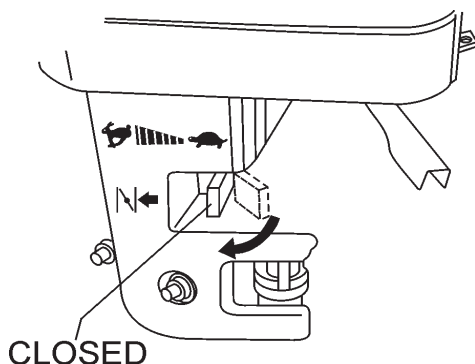


Figure 15. Choke Lever (Open)

8. Before the equipment is placed into operation, run the engine for several minutes. Check for fuel leaks, and noises that would associate with a loose component.
9. To begin compacting, place the throttle lever (Figure 16) in the “**RUN**” position.

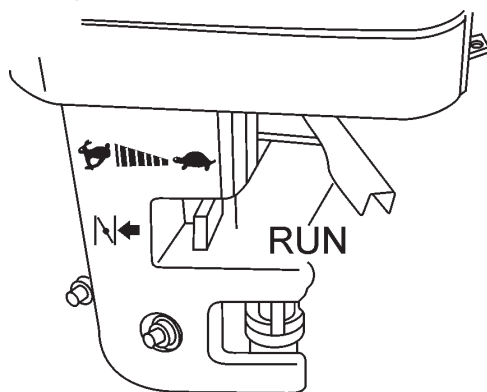


Figure 16. Throttle Lever (Run)

Stopping The Engine

Normal Shutdown

1. Move the throttle lever to the **IDLE** position (Figure 17) and run the engine for three minutes at low speed.

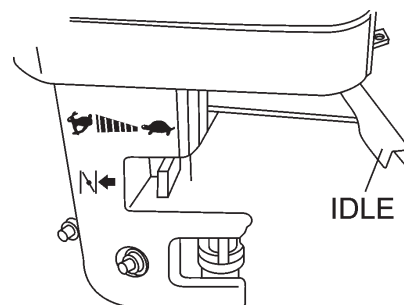


Figure 17. Throttle Lever (Idle)

2. After the engine **cools**, turn the engine ON/OFF switch to the “**OFF**” position (Figure 18).



Figure 18. Engine ON/OFF Switch (OFF)

3. Place the **fuel shut-off lever** (Figure 19) in the **OFF** position.

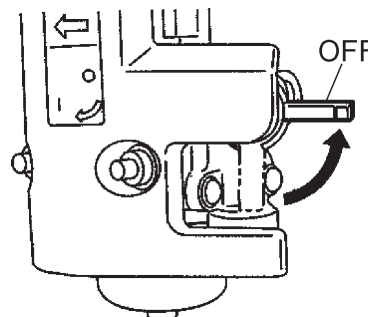


Figure 19. Fuel Valve Lever (OFF)

Emergency Shutdown

1. Move the throttle lever quickly to the **IDLE** position, and place the engine ON/OFF switch in the **OFF** position.

MVC-88GE/GEW PLATE COMPACTOR — MAINTENANCE

CAUTION

Inspection and other services should ***always*** be carried out on hard and level ground with the engine shutdown.

CAUTION

These inspection intervals are for operation under normal conditions. Adjust your inspection intervals based on the number hours plate compactor is in use, and particular working conditions.

Inspection and Maintenance Service Tables.

- To make sure your plate compactor is always in good working condition before using, carry out the maintenance inspection in accordance with Tables 4 through 6.

CAUTION

Fuel piping and connections should be replaced every 2 years.

Table 4. Engine Maintenance Schedule

DESCRIPTION (3)	OPERATION	BEFORE	FIRST MONTH OR 10 HRS.	EVERY 3 MONTHS OR 25 HRS.	EVERY 6 MONTHS OR 50 HRS.	EVERY YEAR OR 100 HRS.	EVERY 2 YEARS OR 200 HRS.
Engine Oil	CHECK	X					
	CHANGE		X				
Air Cleaner	CHECK	X					
	CHANGE			X (1)			
All Nuts & Bolts	Re-tighten If Necessary	X					
Spark Plug	CHECK-CLEAN				X		
	REPLACE						X
Cooling Fins	CHECK				X		
Spark Arrester	CLEAN					X	
Fuel Tank	CLEAN					X	
Fuel Filter	CHECK					X	
Idle Speed	CHECK-ADJUST					X (2)	
Valve Clearance	CHECK-ADJUST						X (2)
Fuel lines	CHECK	Every 2 years (replace if necessary) (2)					

(1) Service more frequently when used in **DUSTY** areas.

(2) These items should be serviced by your service dealer, unless you have the proper tools and are mechanically proficient. Refer to the ROBIN Shop Manual for service procedures.

(3) For commercial use, log hours of operation to determine proper maintenance intervals.

MVC-88GE/GEW PLATE COMPACTOR — MAINTENANCE

TABLE 5. MACHINE INSPECTION

Item	Hours of Operation
Starting check	Every 8 hours (every day)
Loose or lost screws	Every 8 hours (every day)
Damage of any part	Every 8 hours (every day)
Function of controlling system part	Every 8 hours (every day)
Vibrator oil check	Every 100 hours
Vibrator oil replacement	Every 200 hours
V-belt (clutch) check	Every 200 hours

Daily Service

- Check for leakage of fuel or oil.
- Check engine oil.
- Check for loose screws including tightness. See Table 6 below (tightening torque), for retightening.

TABLE 6.

TIGHTENING TORQUE (in. kg/cm) Diameter

Material	6mm	8mm	10mm	12mm	14mm	16mm	18mm	20mm
4T	70	150	300	500	750	1,100	1,400	2,000
6-8T	100	250	500	800	1,300	2,000	2,700	3,800
11T	150	400	800	1,200	2,000	2,900	4,200	5,600
*	100 (6mm) 300 ~ 350 (8mm) 650 ~ 700 (10mm)							
* (In case counter-part is of aluminum)								
(Threads in use with this machine are all right handed)								
Material and quality of material is marked on each bolt, and screw.								

ENGINE OIL

1. Drain the engine oil when the oil is **warm** as shown in Figure 20.
2. Remove the oil drain bolt and sealing washer and allow the oil to drain into a suitable container.
3. Replace engine oil with recommended type oil as listed in Table 3. For engine oil capacity, see Table 2 (engine specifications). **DO NOT** overfill.
4. Install drain bolt with sealing washer and tighten securely.

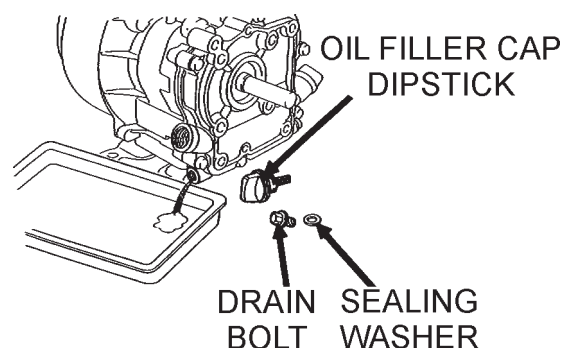


Figure 20. Engine Oil (Draining)

Engine Air Cleaner

1. Remove the air cleaner cover and foam filter element as shown in Figure 21.
2. Wash the foam filter element in kerosene or diesel fuel. Then saturate it in a mixture of 3 parts kerosene or diesel fuel and 1 part engine oil. Completely squeeze the element to remove the mixture and reinstall it back into the air cleaner.

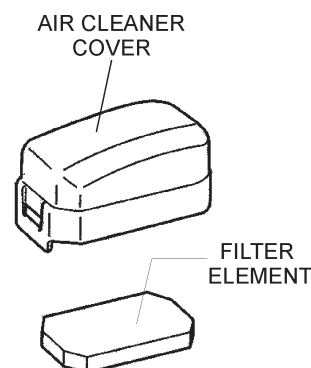


Figure 21. Engine Air Cleaner

CHANGING VIBRATOR OIL

1. When changing the vibrator oil, remove the drain plug located at the bottom-right of the vibrator (Figure 8), and simply tip the compactor to drain the oil. Note that the oil will drain more easily while it is hot. Remember to use only 10W-30 motor oil when replacing vibrator oil.

CAUTION

NEVER attempt to check the V-belt with the engine running. Severe injury can occur if your hand (Figure 5) gets caught between the V-belt and the clutch. Always use safety gloves.

Checking and Replacing the V-Belt and Clutch

1. After 200 hours of operation, remove the upper belt cover to check the V-belt tension. Tension is proper if the belt bends about 10 mm when depressed strongly with finger between shafts. Loose or worn V-belts reduces power transmission efficiency, causing weak compaction and reduces the life of the belt itself.

CAUTION

Whenever the compactor's vibration becomes weak or lost during normal operation regardless of operation hours, check the V-belt and clutch immediately.

■ Replacing the V-belt

Remove the upper and lower belt covers. Engage an offset wrench (13 mm) or the like to vibrator pulley (lower) fastening bolt. Engage waste cloth or the like at midway of V-belt on the left side and while pulling it back strongly, rotate the offset wrench clockwise so that the V-belt will come off.

■ Reinstalling the V-belt

Engage V-belt to lower vibrator pulley and push the V-belt to left side of upper clutch and, in the same manner as in removal, rotate offset wrench clockwise so that the V-belt goes back on.

■ Checking Clutch

Check the clutch simultaneously with V-belt checking. With belt removed, check outer drum of the clutch for seizure and "V" groove for wear or damage with your eyes. Clean the "V" groove as necessary. Wear of lining or shoe should be checked with running check. If the shoe is worn, power transmission becomes deficient and slipping will result.

MVC-88GE/GEW— PREPARATION FOR LONG -TERM STORAGE

Plate Compactor Storage

For storage of the plate compactor for over 30 days, the following is required:

- Drain the fuel tank completely or add STA-BIL to the fuel.
- Run the engine until the fuel is completely consumed.
- Completely drain the oil from the engine crankcase and follow procedures described in the **ROBIN** engine Owner's Manual for engine storage.
- Completely drain the compactor's hydraulic oil from the vibrating case.
- Clean entire plate compactor, especially the bottom plate removing all dirt and foreign matter.
- Cover plate compactor and engine with plastic covering or equivalent and store in a clean, dry place.

MVC-88GE/GEW—TROUBLESHOOTING (ENGINE)

Practically all breakdowns can be prevented by proper handling and maintenance inspections, but in the event of a breakdown, please take remedial action following the diagnosis based on the **Engine**, and **Compactor** Troubleshooting (Tables 7, and 8) information shown below and on the proceeding pages.

If the problem cannot be remedied, please leave the unit just as it is and consult or company's service department.

TABLE 7. ENGINE TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE	SOLUTION
Difficult to start, "fuel is available, but no SPARK at spark plug".	Spark plug bridging?	Check gap, insulation or replace spark plug.
	Carbon deposit on spark plug?	Clean or replace spark plug.
	Short circuit due to deficient spark plug insulation?	Check spark plug insulation, replace if worn.
	Improper spark plug gap?	Set to proper gap.
Difficult to start, "fuel is available, and SPARK is present at the spark plug".	ON/OFF switch is shorted?	Check switch wiring, replace switch.
	Ignition coil defective?	Replace ignition coil.
	Improper spark gap, points dirty?	Set correct spark gap and clean points.
	Condenser insulation worn or short circuiting?	Replace condenser.
	Spark plug wire broken or short circuiting?	Replace defective spark plug wiring.
Difficult to start, "fuel is available, spark is present and compression is normal"	Wrong fuel type?	Flush fuel system, and replace with correct type of fuel.
	Water or dust in fuel system?	Flush fuel system.
	Air cleaner dirty?	Clean or replace air cleaner.
Difficult to start, "fuel is available, spark is present and compression is low"	Suction/exhaust valve stuck or protruded?	Re-seat valves.
	Piston ring and/or cylinder worn?	Replace piston rings and or piston.
	Cylinder head and/or spark plug not tightened properly?	Torque cylinder head bolts and spark plug.
	Head gasket and/or spark plug gasket damaged?	Replace head and spark plug gaskets.
No fuel present at carburetor.	Fuel not available in fuel tank?	Fill with correct type of fuel.
	Fuel cock does not open properly?	Apply lubricant to loosen fuel cock lever, replace if necessary.
	Fuel filter clogged?	Replace fuel filter.
	Fuel tank cap breather hole clogged?	Clean or replace fuel tank cap.
	Air in fuel line?	Bleed fuel line.

MVC-88GE/GEW—TROUBLESHOOTING (ENGINE COMPACTOR)

TABLE 7. ENGINE TROUBLESHOOTING (CONTINUED)

SYMPTOM	POSSIBLE CAUSE	SOLUTION
"Weak in power" compression is proper and does not misfire.	Air cleaner not clean?	Clean or replace air cleaner
	Improper level in carburetor?	Check float adjustment, re-build carburetor.
	Defective Spark plug?	Clean or replace spark plug.
	Defective Spark plug?	
"Weak in power" compression is proper but misfires.	Water in fuel system?	Flush fuel system, and replace with correct type of fuel.
	Dirty spark plug?	Clean or replace spark plug.
	Ignition coil defective?	Replace ignition coil.
Engine overheats.	Spark plug heat value improper?	Replace with correct type of spark plug.
	Correct type of fuel?	Replace with correct type of fuel
	Cooling fins dirty?	Clean cooling fins.
Rotational speed fluctuates.	Governor adjusted correctly?	Adjust governor.
	Governor spring defective?	Replace governor spring.
	Fuel flow restricted?	Check entire fuel system for leaks or clogs.
Recoil starter malfunction.	Recoil mechanism clogged with dust and dirt?	Clean recoil assembly with soap and water.
	Spiral spring loose?	Replace spiral spring.

TABLE 8. PLATE COMPACTOR TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE	SOLUTION
Travel speed too low, and vibration is weak.	Engine speed too low?	Set engine speed to correct RPM.
	Clutch slips?	Check or replace clutch.
	V-belt slips?	Adjust or replace V-belt.
	Excessive oil in vibrator?	Drain excess oil and fill to proper level.
	Malfunction in vibrator housing?	Check eccentric, gears and counter weights.
	Bearing Failure?	Replace Bearing
	Insufficient engine output?	Check engine, compression etc.

MVC-88GE/GEW — EXPLANATION OF CODE IN REMARKS COLUMN

The following section explains the different symbols and remarks used in the Parts section of this manual. Use the help numbers found on the back page of the manual if there are any questions.

NOTICE

The contents and part numbers listed in the parts section are subject to change **without notice**. Multiquip does not guarantee the availability of the parts listed.

SAMPLE PARTS LIST

NO.	PART NO.	PART NAME	QTY.	REMARKS
1	12345	BOLT.....	1	INCLUDES ITEMS W/%
2%		WASHER, 1/4 IN.....		NOT SOLD SEPARATELY
2%	12347	WASHER, 3/8 IN....	1	MQ-45T ONLY
3	12348	HOSE		A/R ...MAKE LOCALLY
4	12349	BEARING	1	S/N 2345B AND ABOVE

NO. Column

Unique Symbols — All items with same unique symbol

(@, #, +, %, or >) in the number column belong to the same assembly or kit, which is indicated by a note in the “Remarks” column.

Duplicate Item Numbers — Duplicate numbers indicate multiple part numbers, which are in effect for the same general item, such as different size saw blade guards in use or a part that has been updated on newer versions of the same machine.

NOTICE

When ordering a part that has more than one item number listed, check the remarks column for help in determining the proper part to order.

PART NO. Column

Numbers Used — Part numbers can be indicated by a number, a blank entry, or TBD.

TBD (To Be Determined) is generally used to show a part that has not been assigned a formal part number at the time of publication.

A blank entry generally indicates that the item is not sold separately or is not sold by Multiquip. Other entries will be clarified in the “Remarks” Column.

QTY. Column

Numbers Used — Item quantity can be indicated by a number, a blank entry, or A/R.

A/R (As Required) is generally used for hoses or other parts that are sold in bulk and cut to length.

A blank entry generally indicates that the item is not sold separately. Other entries will be clarified in the “Remarks” Column.

REMARKS Column

Some of the most common notes found in the “Remarks” Column are listed below. Other additional notes needed to describe the item can also be shown.

Assembly/Kit — All items on the parts list with the same unique symbol will be included when this item is purchased.

Indicated by:

“INCLUDES ITEMS W/(unique symbol)”

Serial Number Break — Used to list an effective serial number range where a particular part is used.

Indicated by:

“S/N XXXXX AND BELOW”

“S/N XXXX AND ABOVE”

“S/N XXXX TO S/N XXX”

Specific Model Number Use — Indicates that the part is used only with the specific model number or model number variant listed. It can also be used to show a part is NOT used on a specific model or model number variant.

Indicated by:

“XXXXX ONLY”

“NOT USED ON XXXX”

“Make/Obtain Locally” — Indicates that the part can be purchased at any hardware shop or made out of available items. Examples include battery cables, shims, and certain washers and nuts.

“Not Sold Separately” — Indicates that an item cannot be purchased as a separate item and is either part of an assembly/kit that can be purchased, or is not available for sale through Multiquip.

MVC-88GE/GEW — SUGGESTED SPARE PARTS


MVC-88GE/GEW 1 TO 5 UNITS WITH ROBIN EX170D40050 ENGINE

1 to 5 Units

<u>Qty.</u>	<u>P/N</u>	<u>Description</u>
3	070100332	V-BELT
5	0650140150	SPARK PLUG
1	2825011118	ROPE, RECOIL STARTER
5	2773261107	ELEMENT, CLEANER
1	0430440050	CAP, FUEL TANK
1	0641360010	FUEL FILTER, FUEL TANK
4	939010140	SHOCK ABSORBER

MVC-88GE/GEW— NAME PLATE AND DECALS

NAME PLATE AND DECALS

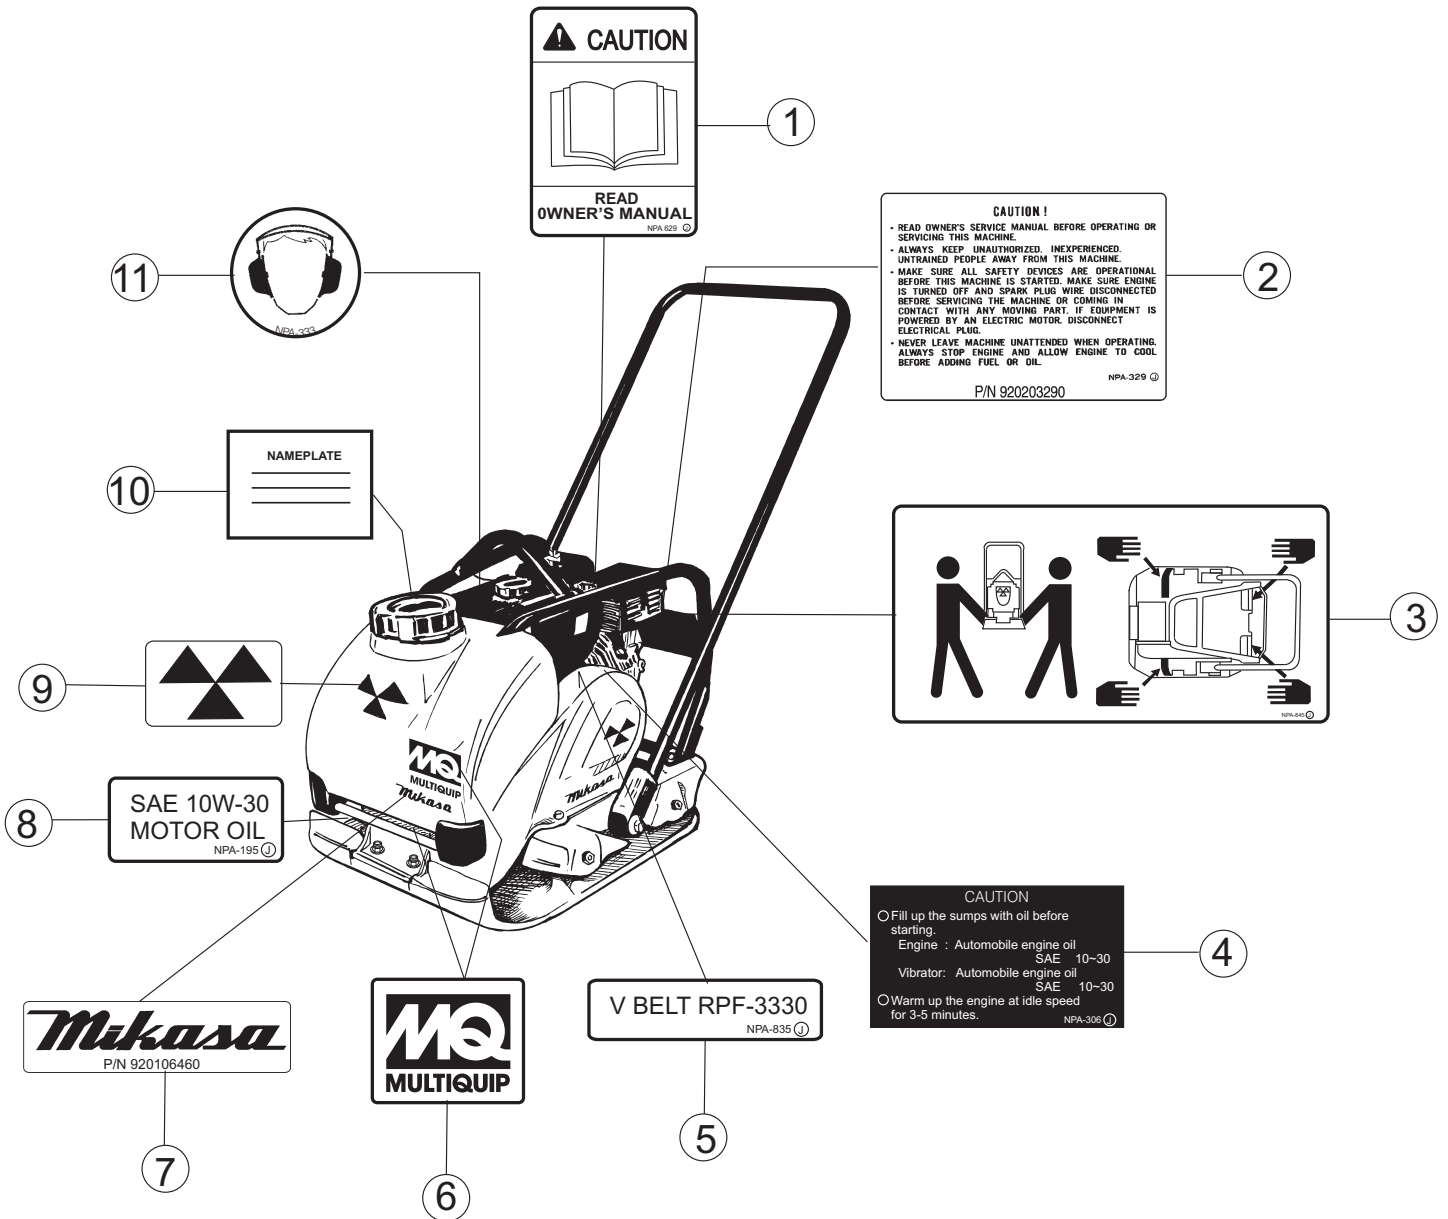


MVC-88GE/GEW— NAME PLATE AND DECALS

NAME PLATE AND DECALS

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	920206290	DECAL, READ OWNERS MANUAL	1	NPA-629
2	920203290	DECAL, CAUTION	1	NPA-329
3	920208450	DECAL, LIFTING	1	NPA-845
4	920203060	DECAL, CAUTION (START ENG/VIBR) .	1	NPA-306
5	920208350	DECAL, V- BELT RPF-3330	1	NPA-835
6	920201580	DECAL, MQ LOGO	2	NPA-158
7	920106460	DECAL, MIKASA LOGO (NAME)	1	NPA-507
8	920201950	DECAL, MOTOR OIL	1	NPA-195
9	920101410	DECAL, MIKASA LOGO (TRIANGLE) ...	1	NPA-141
10		PLATE, SERIAL NO.	1	CONTACT MQ PARTS DEPT. W/MODEL & S/N
11	920203330	EAR PROTECTION LABEL	1	NPA-333

VIBRATING PLATE ASSY.

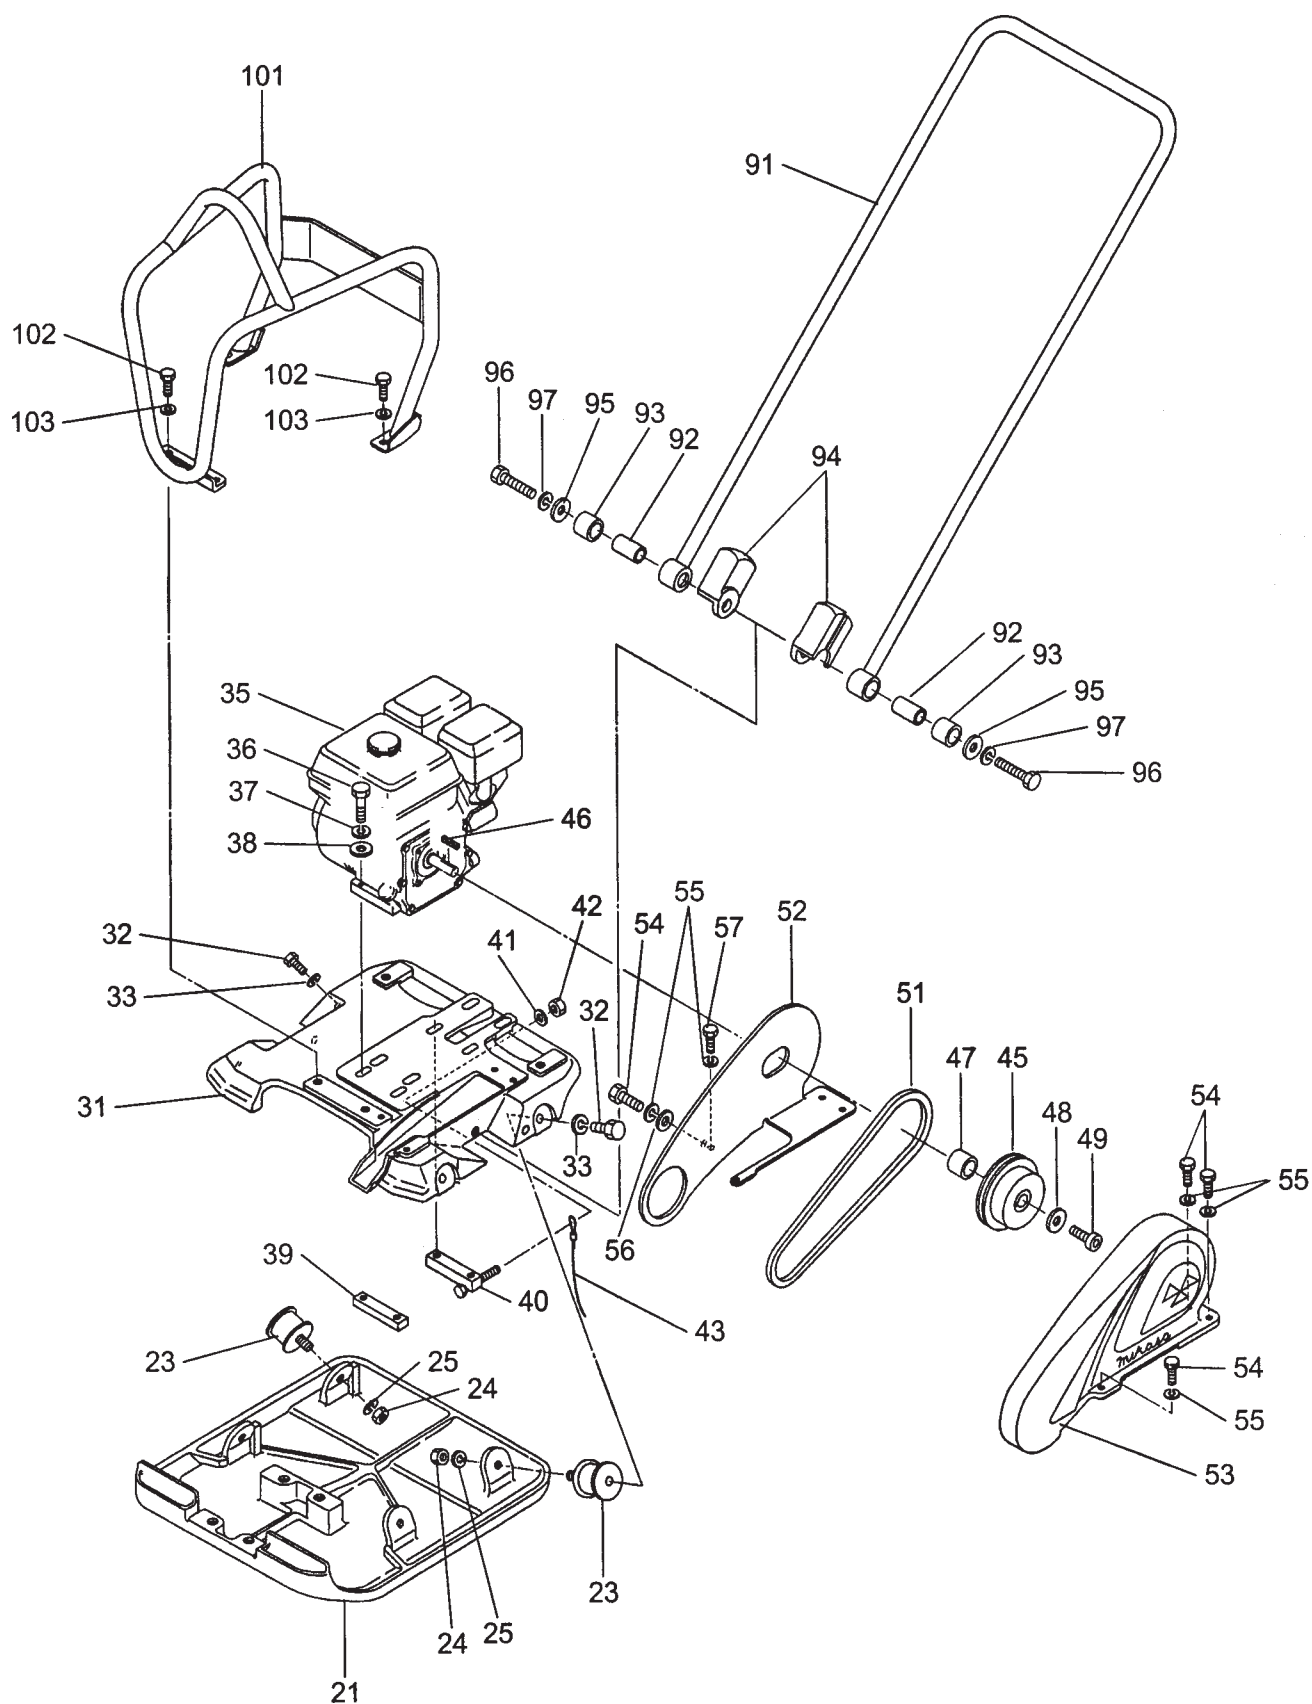


BODY ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
21	416115971	VIBRATING PLATE	1	
23	939010140	SHOCK ABSORBER 50D-45H	4	
24	020310080	NUT M10	4	
25	030210250	WASHER SW M10	4	
31	416115980	BASE	1	
32	001221025	BOLT 10X25 T	4	
33	030210250	WASHER, LOCK M10	4	
35	911221701	ENGINE ASSY. EX170D40050	1	
36	001220845	BOLT 8X45 T	4	
37	030208200	WASHER, LOCK M8	4	
38	031108160	WASHER, FLAT M8	4	
39	404412290	ENGINE NUT	1	
40	416452780	ENGINE NUT (W/BOLT)	1	
41	031108160	WASHER, FLAT M8	1	
42	022710809	NYLON NUT M8	1	
43	959404350	EARTH WIRE	1	
45	416338990	CLUTCH ASSY.	1	
46	951010170	KEY 4.77X4. 77X35	1	
47	416452800	COLLAR 19.05-25-15.6	1	
48	952400130	WASHER	1	
49	009110004	SOCKET HEAD BOLT 5/16X24	1	
51	070100332	V-BELT RPF-3330	1	
52	416115950	BELT COVER (INSIDE)	1	
53	416116000	BELT COVER	1	
54	001220825	BOLT 8X25 T	4	
55	030208200	WASHER, LOCK M8	5	
56	031108160	WASHER, FLAT M8	1	
57	001220820	BOLT 8X20 T	1	
91	416115930	HANDLE	1	
92	416452730	COLLAR 13-20-44	2	
93	404433430	RUBBER 20X32X28.5/52H	2	
94	416452360	HANDLE STOPPER	2	
95	952405600	WASHER 12.5X35X4.5	2	
96	001211253	BOLT 12X65 H	2	
97	030212300	WASHER, LOCK M12	2	
101	416115940	GUARD HOOK /MVC-88	1	
102	001221025	BOLT 10X25 T	4	
103	030210250	WASHER, LOCK M10	4	

MVC-88GE/GEW—VIBRATOR ASSY.

VIBRATOR ASSY.

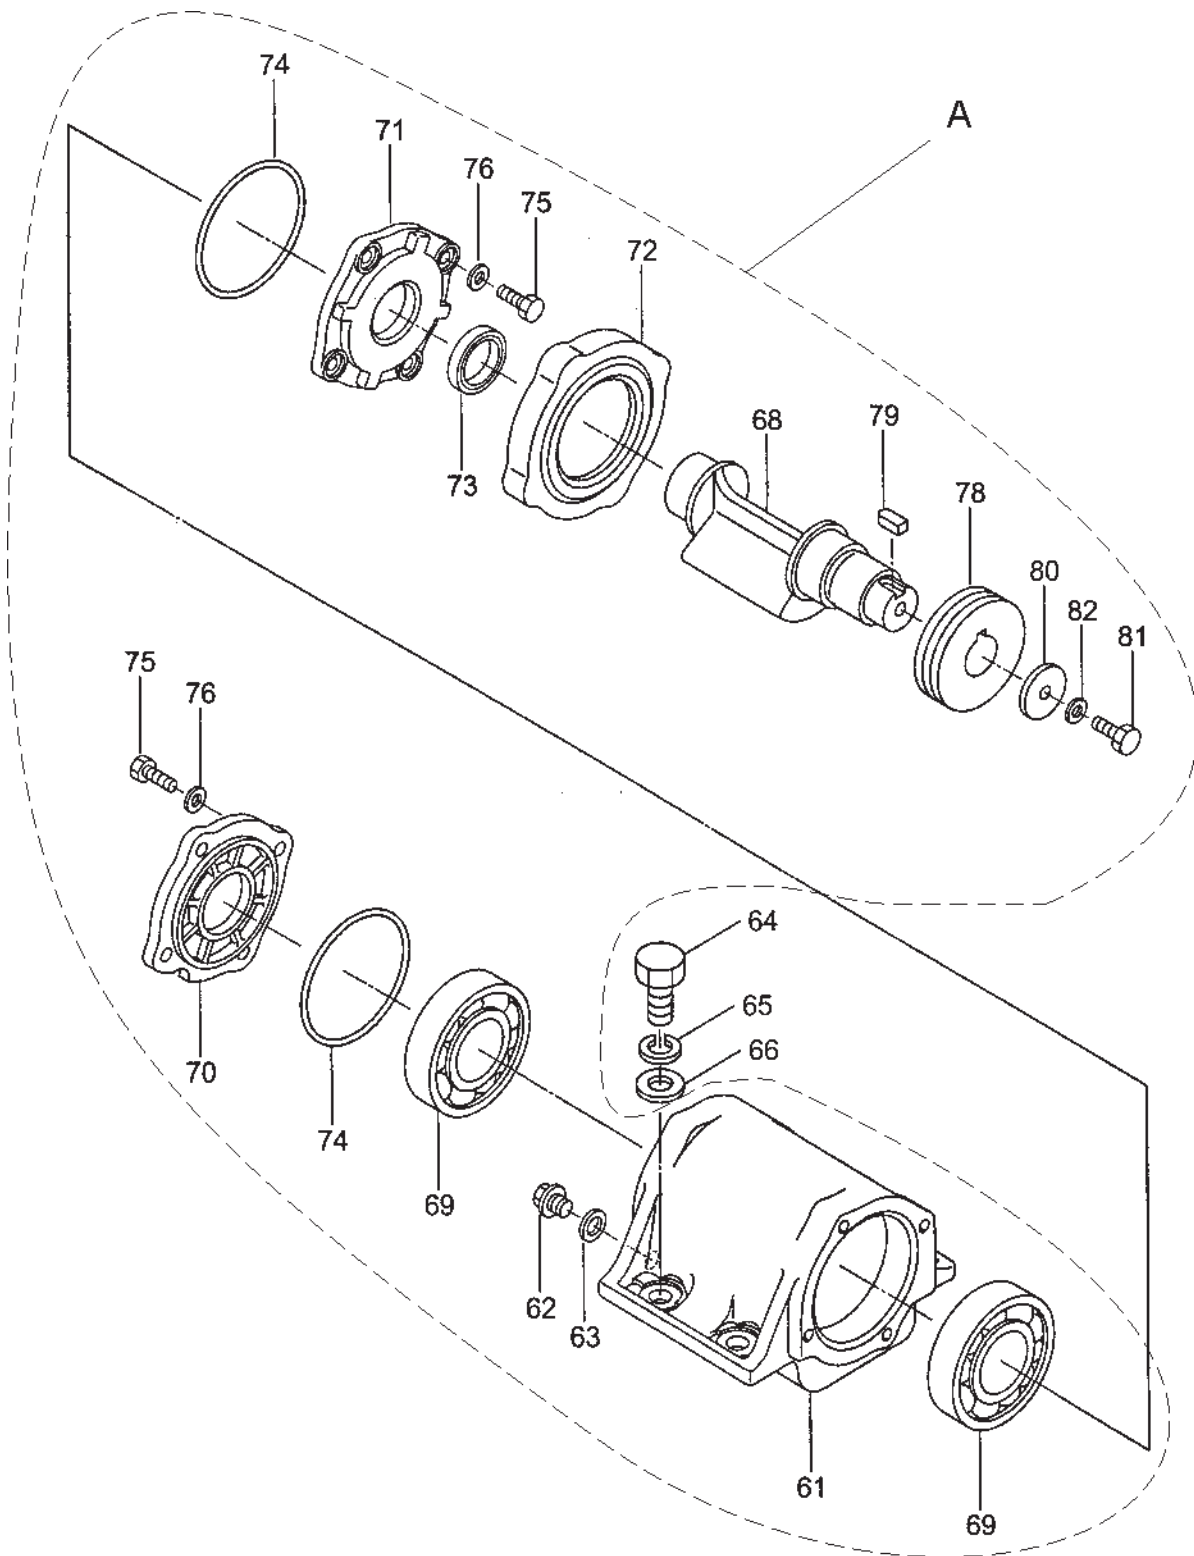


MVC-88GE/GEW—VIBRATOR ASSY.

VIBRATOR ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
A	416910030	VIBRATOR ASSY	1	INCLUDES ITEMS W/ #
61#	416115990	VIBRATING CASE	1	
62#	953400270	PLUG 1/4X14 10L	1	
63#	953405260	PACKING 1/4	1	
64	001221635	BOLT 16X35 T	4	
65	030216400	WASHER, LOCK M16	4	
66	031116260	WASHER, FLAT M16	4	
68#	416338890	ECCENTRIC ROTATOR	1	
69#	040306211	BEARING 6211C3	2	
70#	416338900	CASE COVER (R)	1	
71#	416338910	CASE COVER (L)	1	
72#	416338920	BELT COVER GUARD	1	
73#	060403060	OIL SEAL TC-35488	1	
74#	050101000	O-RING G-100	2	
75#	001220825	BOLT 8X25 T	8	
76#	030208200	WASHER, LOCK M8	8	
78#	416452720	PULLEY A1-30-86-20B	1	
79#	951405240	KEY 7X7X19 R	1	
80#	952404250	WASHER 11X40X4	1	
81#	001221025	BOLT 10X25 T	1	
82#	030210250	WASHER, LOCK M10	1	

MVC-88GE/GEW— SPRINKLER ASSY. (OPTION)

SPRINKLER ASSY. (OPTION)

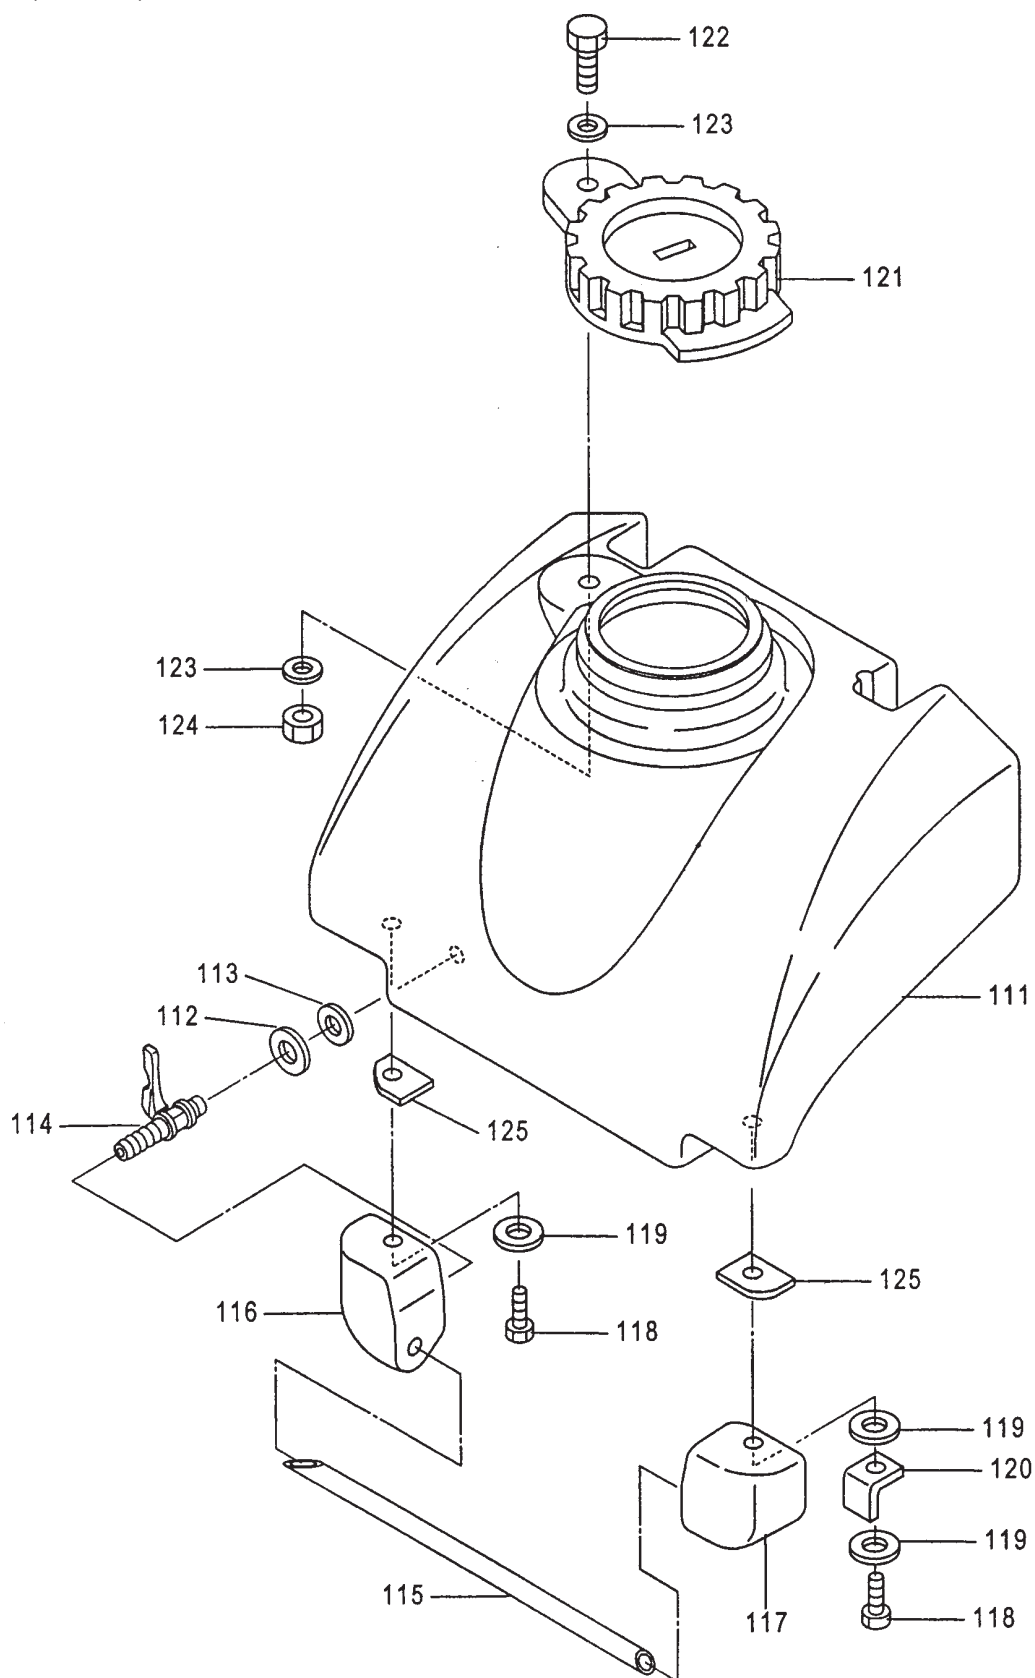


MVC-88GE/GEW— SPRINKLER ASSY. (OPTION)

SPRINKLER ASSY. (OPTION)

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
111	4169100109	WATER TANK ASSY.	1	INCLUDES ITEMS W/*
111A*	416910010	WATER TANK (W/CAP ONLY)	1	REPLACES 416116010 INCLUDES ITEMS W/#
112*	033910050	WASHER 14.5X30X1.6	1	
113*	953406390	PACKING 13X28X2	1	
114*	954403241	COCK PT1/4	1	
115*	416338930	SPRINKLING PIPE	1	
116*	416338940	PIPE HOLDER (L)	1	
117*	416452750	PIPE HOLDER (R)	1	
118*	001740825	FLANGE BOLT 8X25	2	
119*	416453780	PACKING 8X19X2T	3	
120*	416452790	STAY, PIPE HOLDER	1	
121*#	954300340	CAP, WATER TANK	1	
122*#	001241030	BOLT 10X30	1	
123*#	033910010	WASHER 10.5X21X2	2	
124*#	022910180	NYLON NUT M10	1	
125*#	416453800	SEAT PACKING	2	

MVC-88GE/GEW—TRANSPORT WHEEL ASSY. (OPTION)

TRANSPORT WHEEL ASSY. (OPTION)

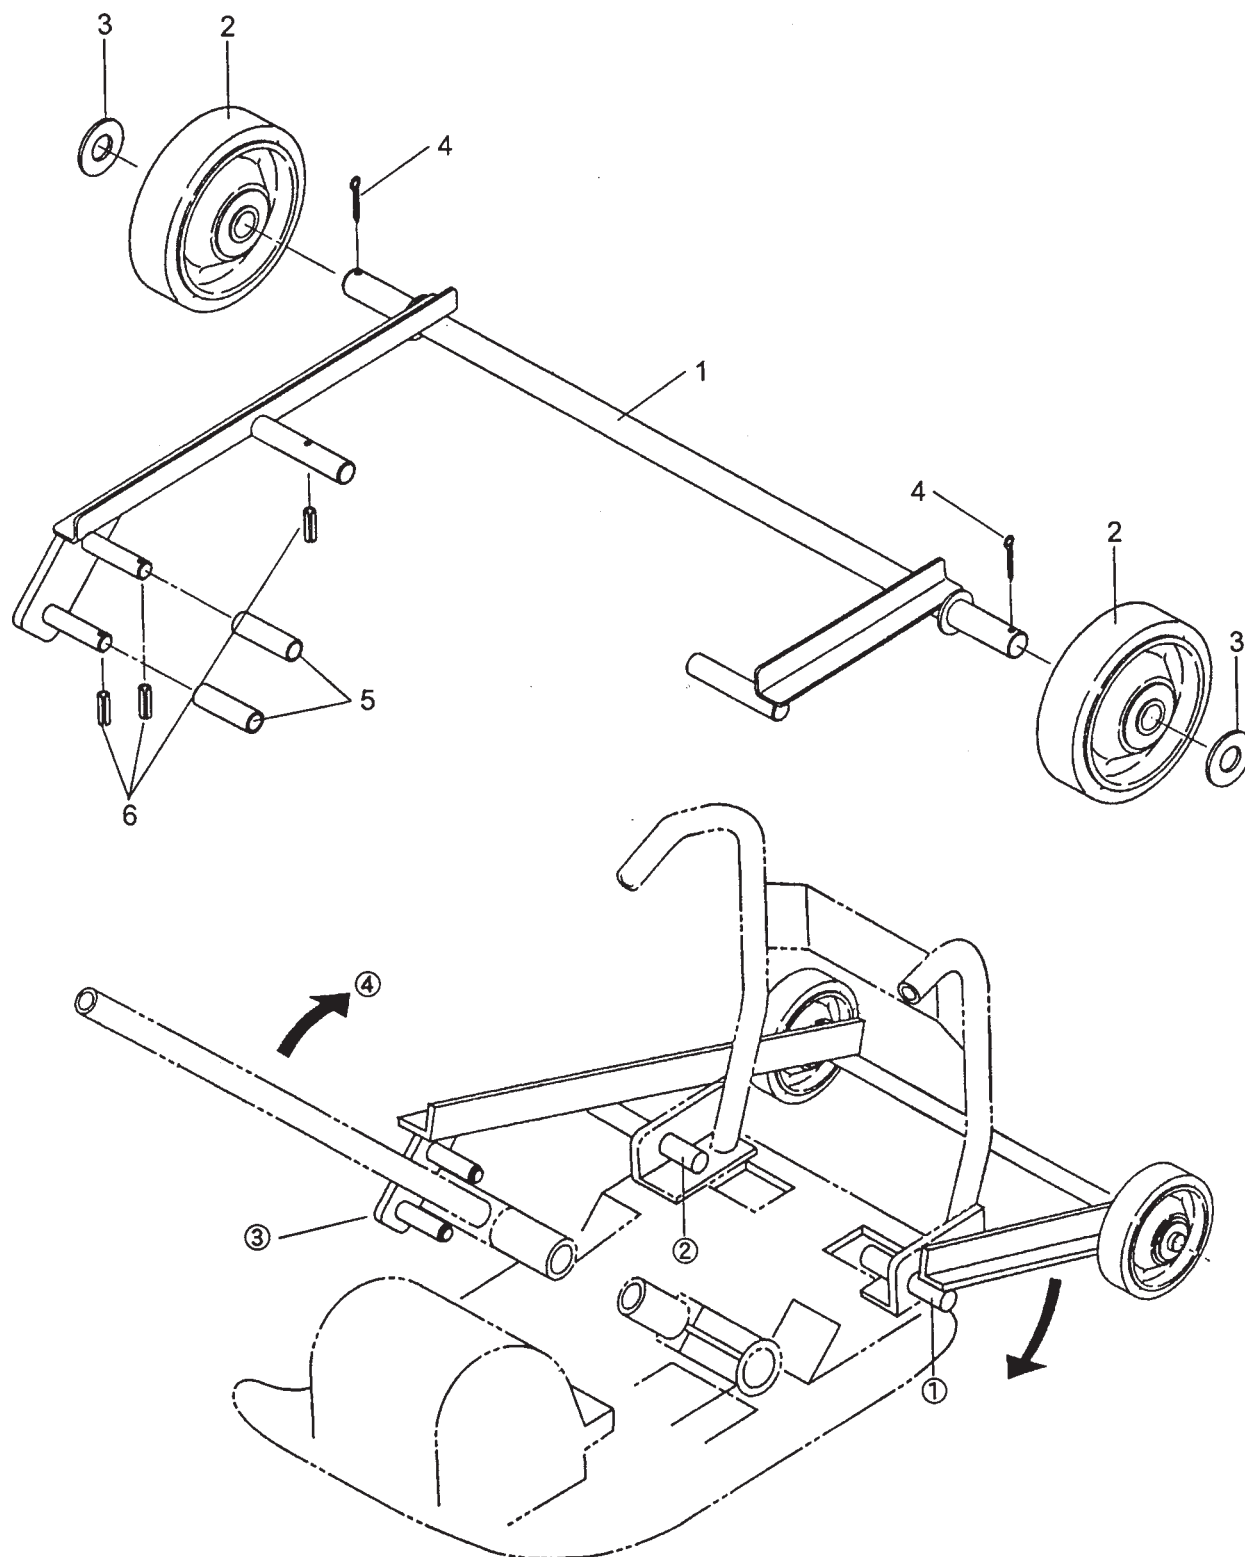


MVC-88GE/GEW—TRANSPORT WHEEL ASSY. (OPTION)

TRANSPORT WHEEL ASSY. (OPTION)

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	416116160	WHEEL SHAFT	1	
2	959404310	WHEEL 150X42	2	
3	031120320	WASHER, FLAT M20	2	
4	025203030	SPLIT COTTER PIN 3X30	2	
5	416454150	ROLLER	2	
6	025403025	SPRING PIN 3X25	3	

EX-170D40050 — AIR CLEANER ASSY.

AIR CLEANER ASSY.

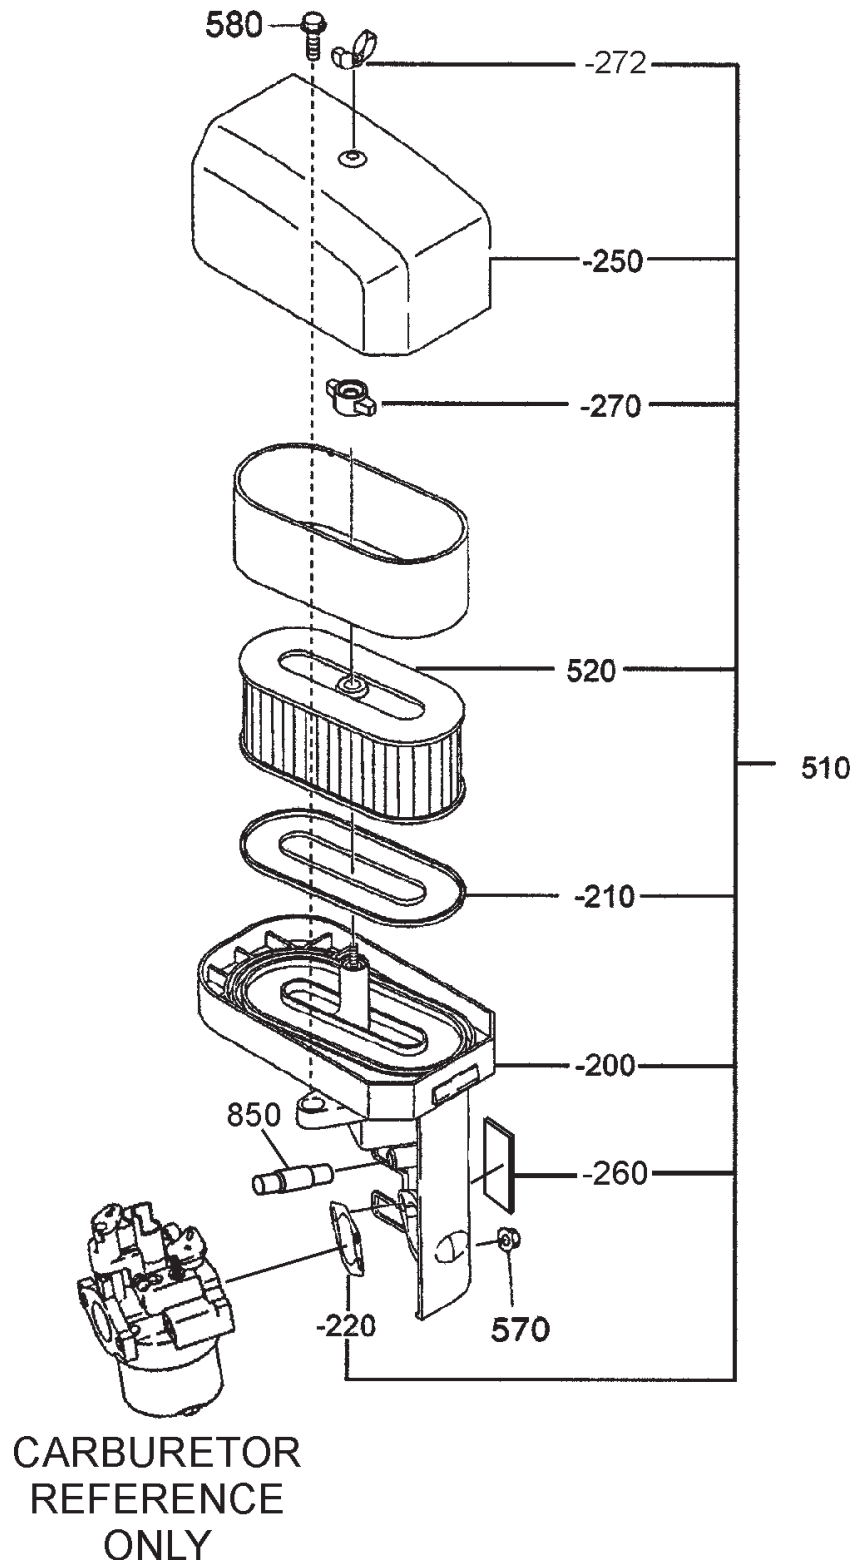


EX-170D40050 — AIR CLEANER ASSY.

AIR CLEANER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
510	2773261500	AIR CLEANER ASSY.	1	INCLUDES ITEMS W/ *
200*	2773263008	BASE, CLEANER	1	
210*	2773261008	PACKING, CLEANER	1	
220*	2773260408	GASKET, CLEANER	1	
250*	2773264008	COVER, CLEANER	1	
260*	2773260908	LABEL, THROTTLE	1	
270*	2773274108	WING, NUT	1	
272*	2773274008	WING, NUT	1	
520*	2773261107	CLEANER, ELEMENT	1	
570	0023806000	FLANGE NUT	2	
580	0110060050	FLANGE BOLT	1	
850	0851080000	RUBBER PIPE	1	

CAMSHAFT ASSY.

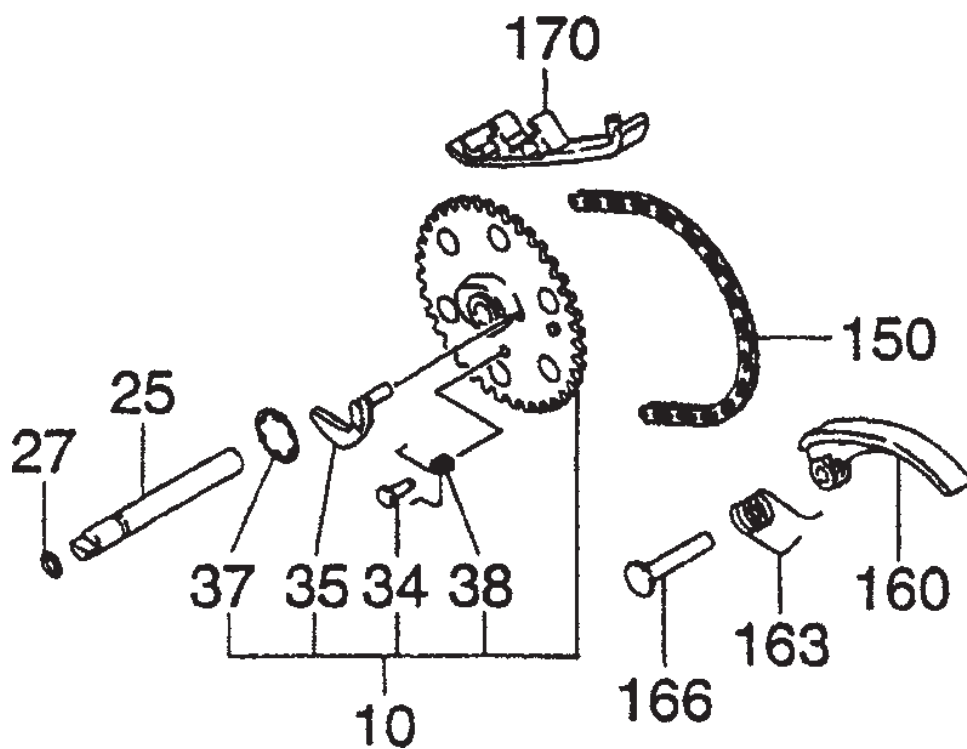


EX-170D40050 — CAMSHAFT ASSY.

CAMSHAFT ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
10	2773160101	CAMSHAFT	1	INCLUDES ITEMS W/%
25	2773510103	PIN, CAMSHAFT	1	
27	0240060010	O-RING	1	
34%	2773860103	PIN, SPRING	1	
35%	2773640103	RELEASE LEVER	1	
37%	2773650103	CLIP	1	
38%	2773870103	RETURN SPRING	1	
150	2773560101	CHAIN, TIMING	1	
160	2773691103	TENSIONER	1	
163	2773710103	SPRING, TENSIONER	1	
166	2773690203	PIN, TENSIONER	1	
170	2773691313	CHAIN, GUIDE	1	

EX-170D40050 — CARBURETOR ASSY.

CARBURETOR ASSY.

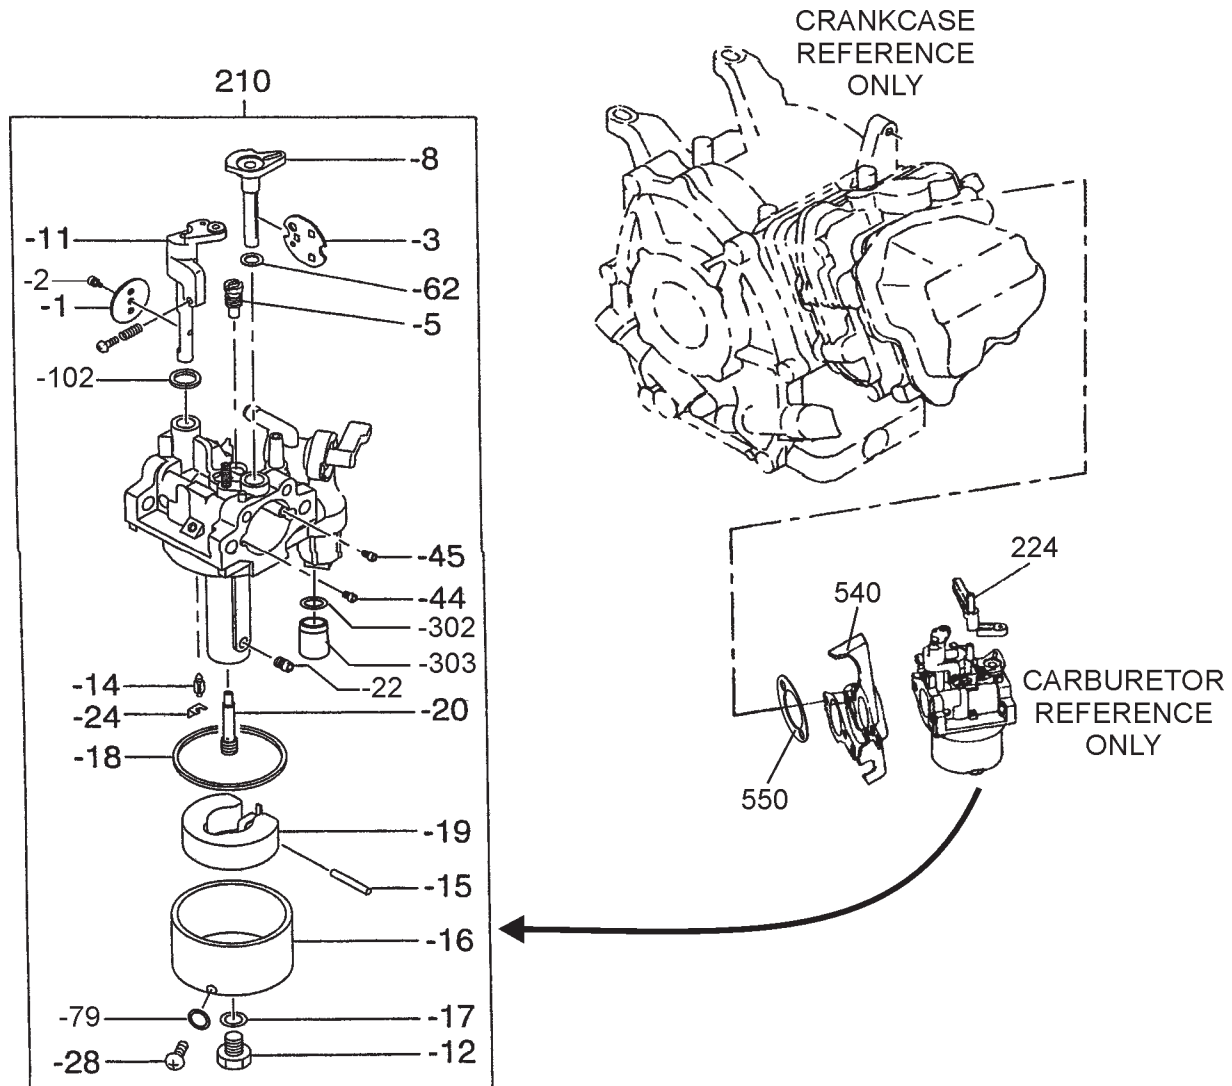


EX-170D40050 — CARBURETOR ASSY.

CARBURETOR ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
210	2776230210	CARBURETOR ASSY.	1.....	INCLUDES ITEMS W/ *
210-1*	2776253508	THROTTLE VALVE	1	
210-2*	2096235108	SCREW	1	
210-3*	2776252508	CHOKE VALVE	1	
210-5*	2466242008	PILOT JET	1	
210-8*	2776252008	CHOKE LEVER	1	
210-11*	2776253108	THROTTLE SHAFT	1	
210-12*	2276245108	BOLT	1	
210-14*	2776250008	NEEDLE	1	
210-15*	2776251508	FLOAT PIN	1	
210-16*	2776250608	FLOAT BODY	1	
210-17*	2146245008	PACKING	1	
210-18*	2146254008	FLOAT CHAMBER PACKING	1	
210-19*	2266250608	FLOAT ASSY.	1	
210-20*	2776244008	MAIN NOZZLE	1	
210-22*	2266241208	MAIN JET	1	
210-24*	2266270118	CLIP	1	
210-28*	2776236008	BOLT	1	
210-44*	2486241008	AIR JET	1	
210-45*	1066241008	AIR JET (PILOT)	1	
210-62*	2366268008	SEAL	1	
210-79*	2366254108	PACKING	1	
210-102*	2466239008	SEAL	1	
210-302*	0642006410	RUBBER PACKING	1	
210-303*	0642007810	CUP	1	
224	2774380101	CHOKE LEVER	1	
540	2773290113	INSULATOR	1	
550	2773590113	GASKET, INSULATOR	1	

EX-170D40050 — CRANKCASE ASSY.

CRANKCASE ASSY.

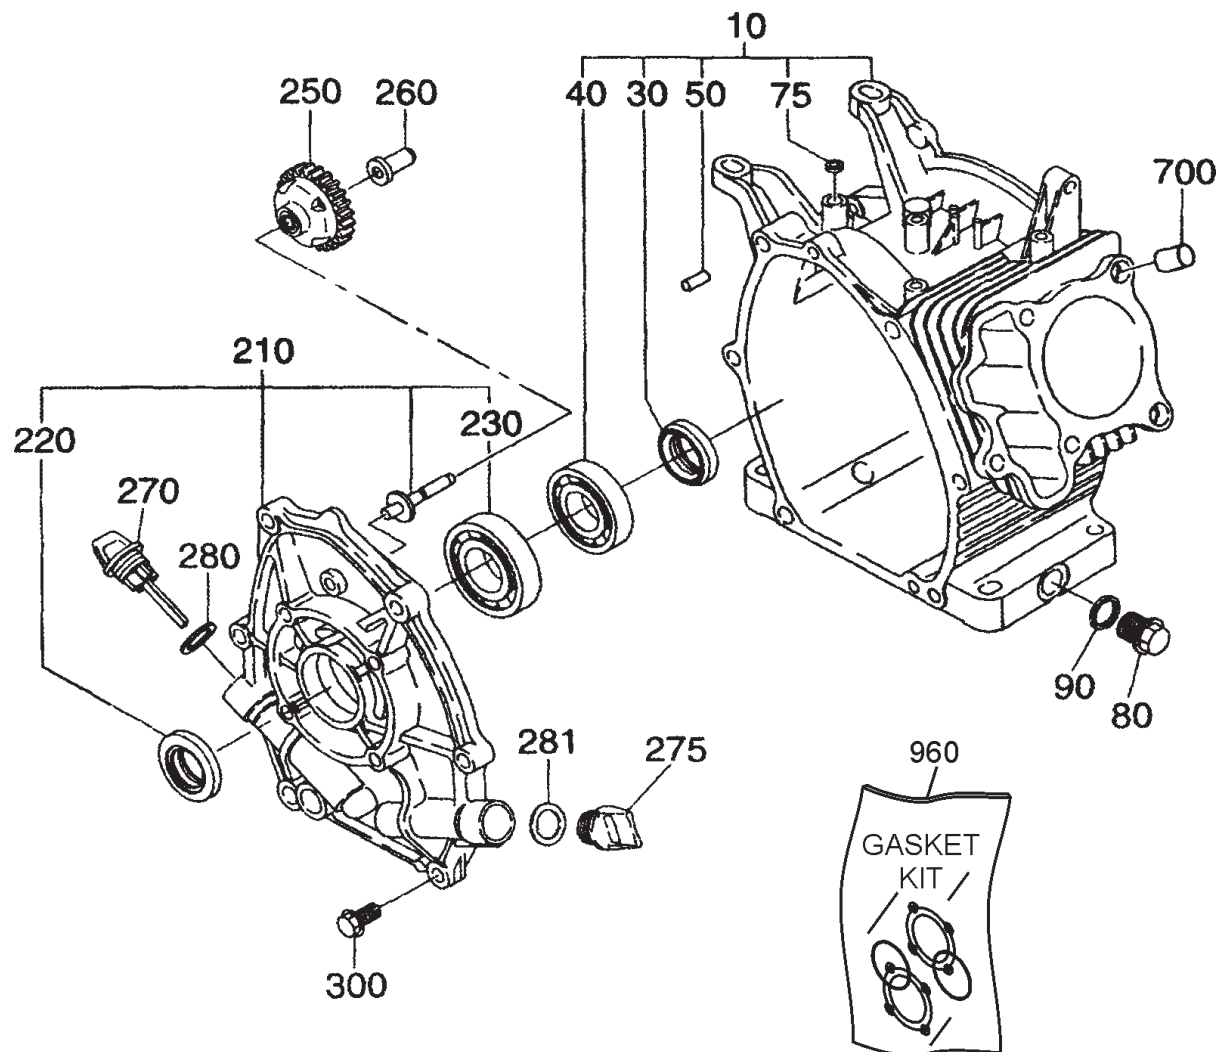


EX-170D40050 — CRANKCASE ASSY.

CRANKCASE ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
10	2771010141	CRANKCASE CP, W/OIL SENSOR	1	INCLUDES ITEMS W/*
30*	0440250200	OIL SEAL	1	
40*	0600280021	BALL BEARING	1	
50*	2771501103	PIPE KNOCK	2	
75*	0440060020	OIL SEAL	1	
80	0401140030	PLUG	2	
90\$	0211140020	GASKET	2	
210	2771100131	MAIN BEARING COVER CP	1	INCLUDES ITEMS W/%
220%	0440250210	OIL SEAL	1	
230%	0600250140	BALL BEARING	1	
250	2774500421	GOVERNOR GEAR	1	
260	2634190103	GOVERNOR SLEEVE	1	
270	2776360113	OIL GAUGE	1	
275	2776500103	FILLER, PLUG	1	
280\$	0213160020	GASKET	1	
281	0213160020	GASKET	1	
300	0010408350	FLANGE BOLT	6	
700	2771501103	PIPE KNOCK	2	
960	2779900107	GASKET SET	1	INCLUDES ITEMS W/ \$, ITEMS 620 AND 690 IN CYLINDER HEAD ASSY, AND ITEM 340 IN MUFFLER ASSY

EX-170D40050 — CRANKSHAFT/PISTON ASSY.

CRANKSHAFT/PISTON ASSY.

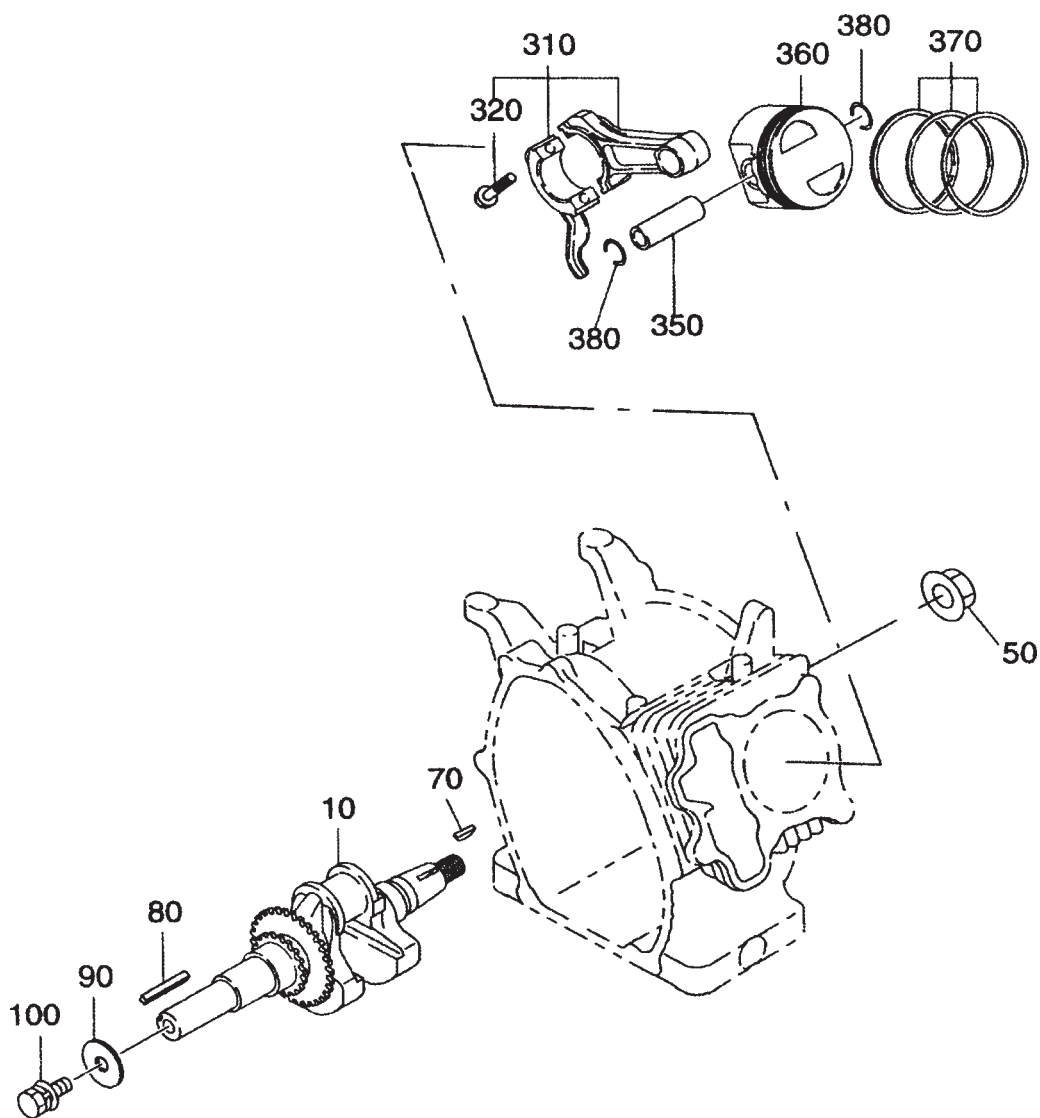


EX-170D40050 — CRANKSHAFT/PISTON ASSY.

CRANKSHAFT/PISTON ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
10	2772020111	CRANKSHAFT	1	
50	0180140020	FLANGE NUT	1	
70	0323030010	WOODRUFF KEY	1	
80	0053005301	KEY	1	
90	0200080050	WASHER	1	
100	0011308200	BOLT & WASHER ASSY.	1	
310	2772250110	CONNECTING ROD ASSY.	1	INCLUDES ITEMS W/*
320*	2772300103	CONNECTING ROD BOLT	2	
350	2772330103	PISTON PIN	1	
360	2772340103	PISTON STD.	1	
360	2772340303	PISTON, 0.25 O.S.	1	
360	2772340403	PISTON, 050 O.S.	1	
370	2772351127	PISTON RING SET STD.	1	
370	2772351207	PISTON RING SET, 0.25 O.S.	1	
370	2772351307	PISTON RING SET, 0.5 O.S.	1	
380	0565160010	CLIP	2	

EX-170D40050 — CYLINDER HEAD ASSY.

CYLINDER ASSY.

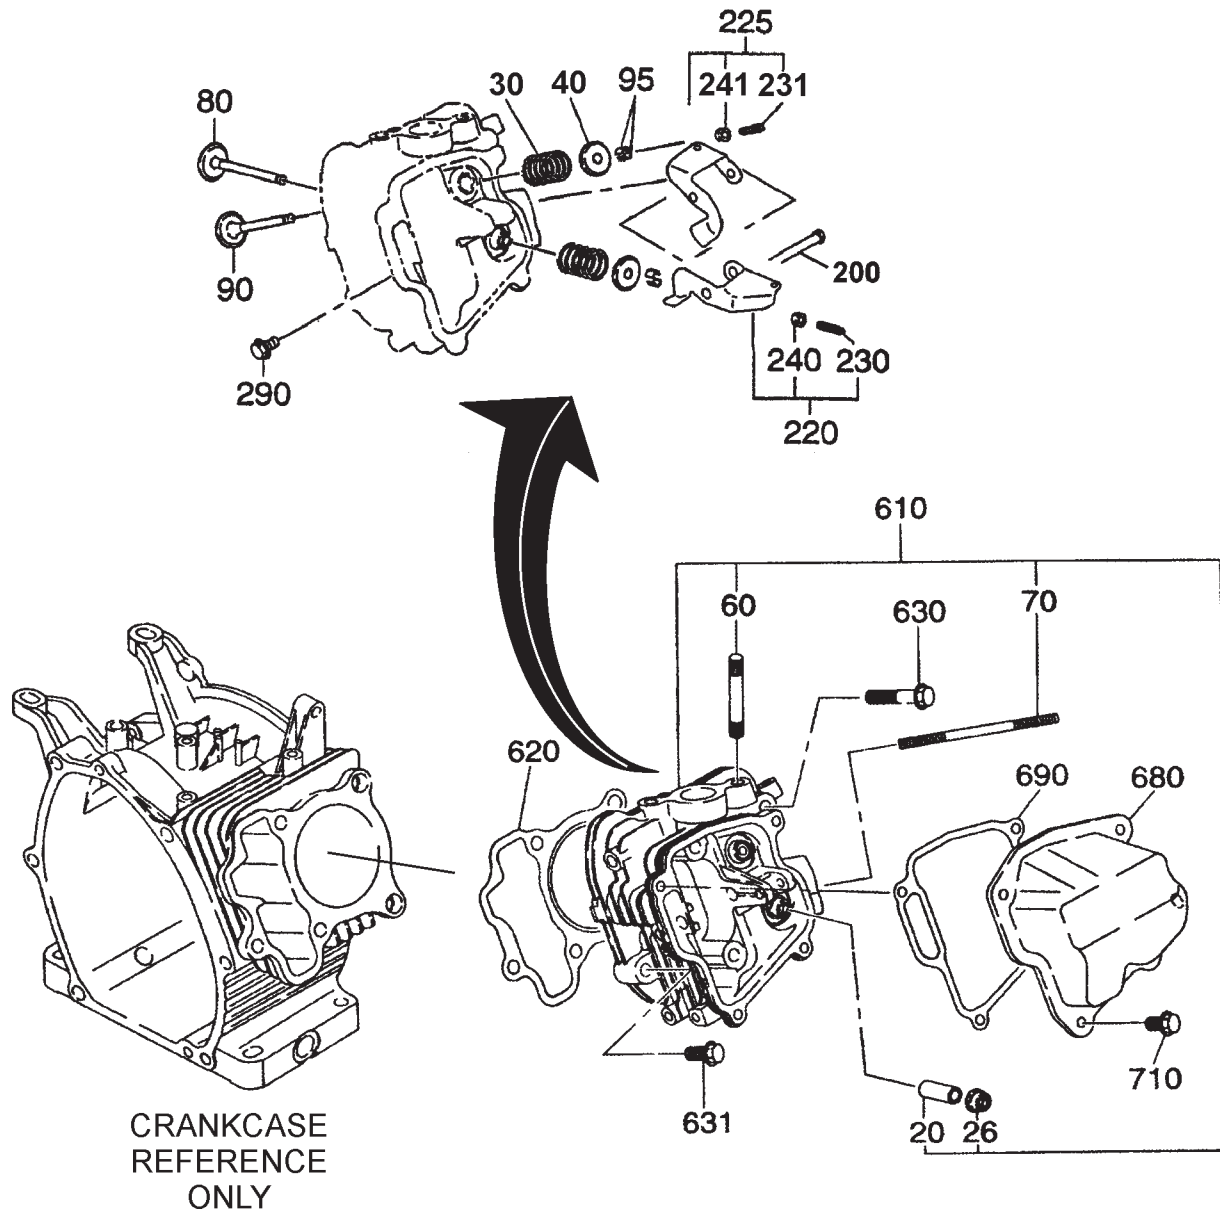


EX-170D40050 — CYLINDER HEAD ASSY.

CYLINDER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
20#	2371420203	VALVE GUIDE	2	
26#	2771601001	STEM SEAL	1	
30	2793360103	VALVE, SPRING	2	
40	2693370103	SPRING RETAINER	2	
60#	0105080250	STUD	2	
70#	0105060351	STUD	2	
80	2773340113	INTAKE VALVE	1	
90	2773350113	EXHAUST VALVE	1	
95	13210KA031	COLLET VALVE	4	
200	2773500123	PIN, ROCKER	1	
220	2773610100	ROCKER, ARM ASSY. IN	1	INCLUDES ITEMS W/ +
225	2773610200	ROCKER, ARM EX	1	INCLUDES ITEMS W/ \$
230+	0149050010	ADJUSTING SCREW	1	
231\$	0149050010	ADJUSTING SCREW	1	
240+	0170050020	NUT	1	
241\$	0170050020	NUT	1	
290	0110060020	FLANGE BOLT	1	
610	2771300101	CYLINDER HEAD	1	INCLUDES ITEMS W/#
620	2771500113	GASKET HEAD	1	
630	0110080240	FLANGE BOLT	4	
631	0010408350	FLANGE BOLT	1	
680	2771550101	ROCKER, COVER	1	
690	2771600103	GASKET, LOCKER COVER	1	
710	0110060020	FLANGE BOLT	4	

EX-170D40050 — FUEL TANK ASSY.

FUEL TANK ASSY.

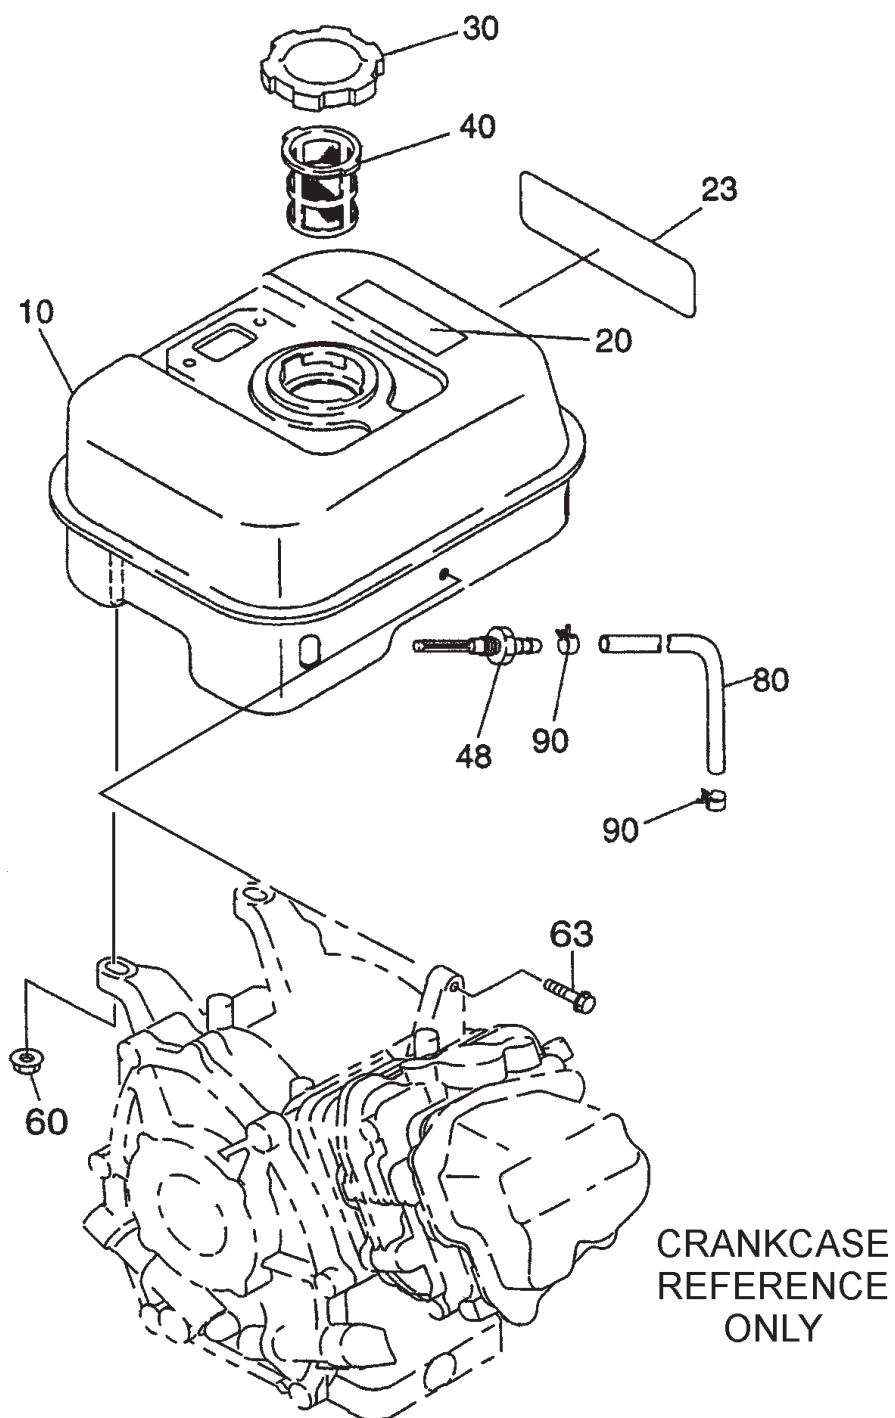


EX-170D40050 — FUEL TANK ASSY.

FUEL TANK ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
10	2776010201	FUEL TANK	1	
20	0732005180	LABEL, WARNING	1	
23	2779510103	LABEL, MODEL	1	
30	0430440050	FUEL TANK, CAP	1	
40	0641360010	FUEL FILTER	1	
48	0505120020	UNION	1	
60	0023806000	FLANGE, NUT	2	
63	0110060130	FLANGE, BOLT	1	
80	0851960000	RUBBER PIPE, 6DX11D	1	
90	0561100030	HOSE CLAMP, 10DX8BX1T	2	

EX-170D40050 — GOVERNOR ASSY.

GOVERNOR ASSY.

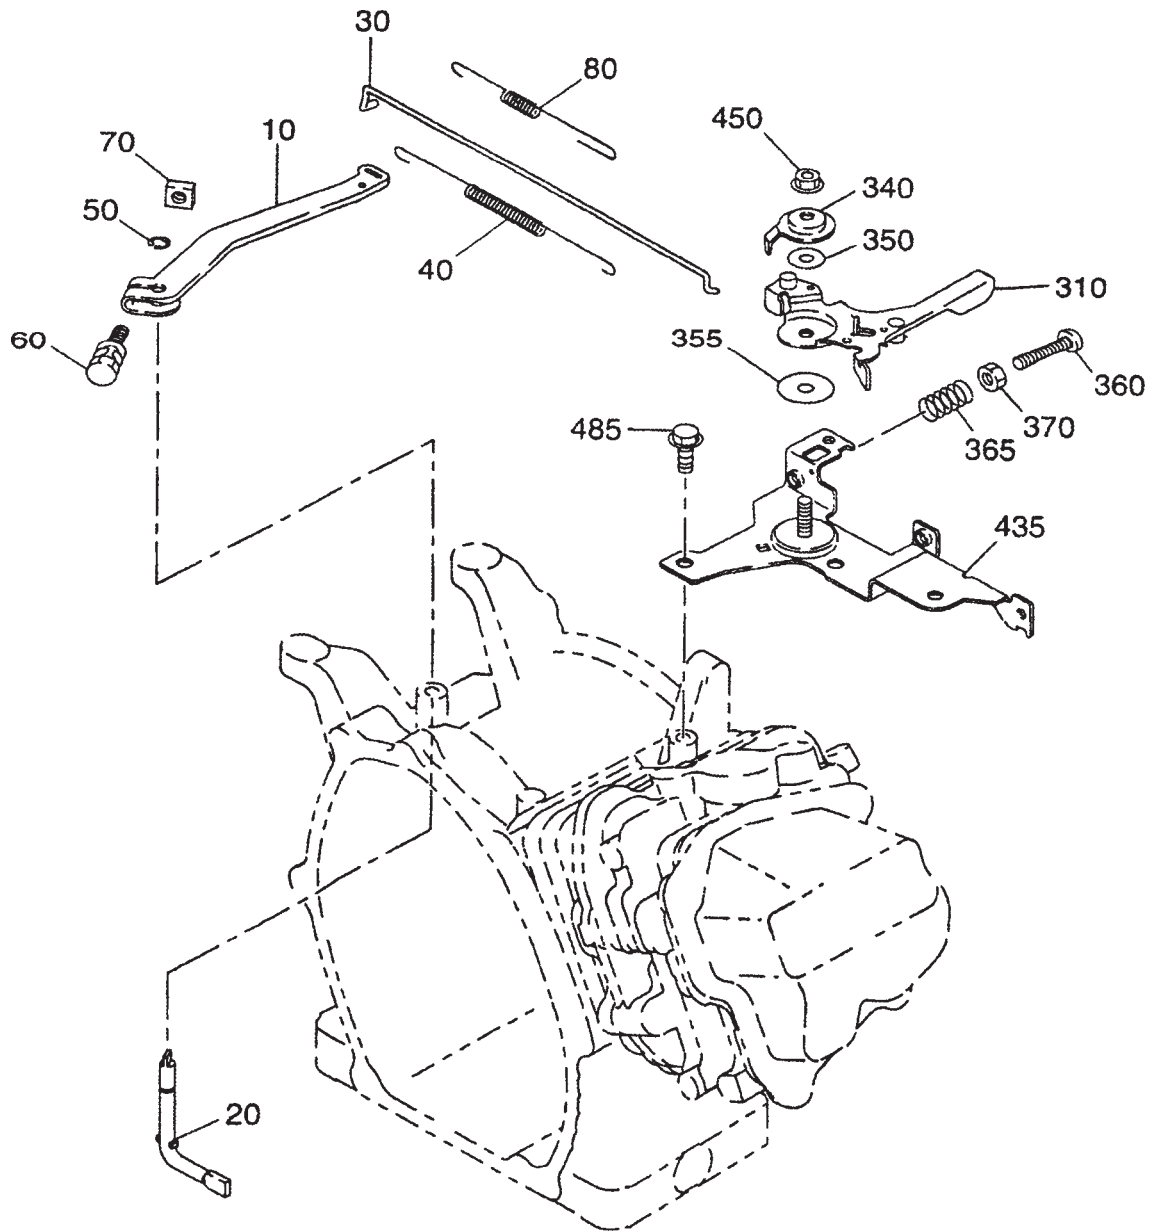


GOVERNOR ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
10	2774230113	GOVERNOR, LEVER	1	
20	2774220133	GOVERNOR, SHAFT	1	
30	2774270101	GOVERNOR, ROD	1	
40	2774280113	ROD, SPRING	1	
50	0031305000	CLIP	1	
60	0130060240	BOLT & WASHER ASSY	1	
70	0186060020	NUT	1	
80	2794250223	GOVERNOR, SPRING	1	
310	2774330113	SPEED CONTROL, LEVER	1	
340	2774350103	STOP, PLATE	1	
350	0200060170	WASHER	1	
355	0217060070	FRICTION, WASHER	1	
360	0140060180	SCREW	1	
365	2374500423	SPRING, ADJUST	1	
370	0021706000	NUT	1	
435	2774600101	SPEED, CONT. BRACKET	1	
450	0023506000	LOCK NUT	1	
485	0110060020	FLANGE, BOLT	2	

EX-170D40050 — IGNITION COIL/FLYWHEEL ASSY.

ELECTRIC DEVICE ASSY.

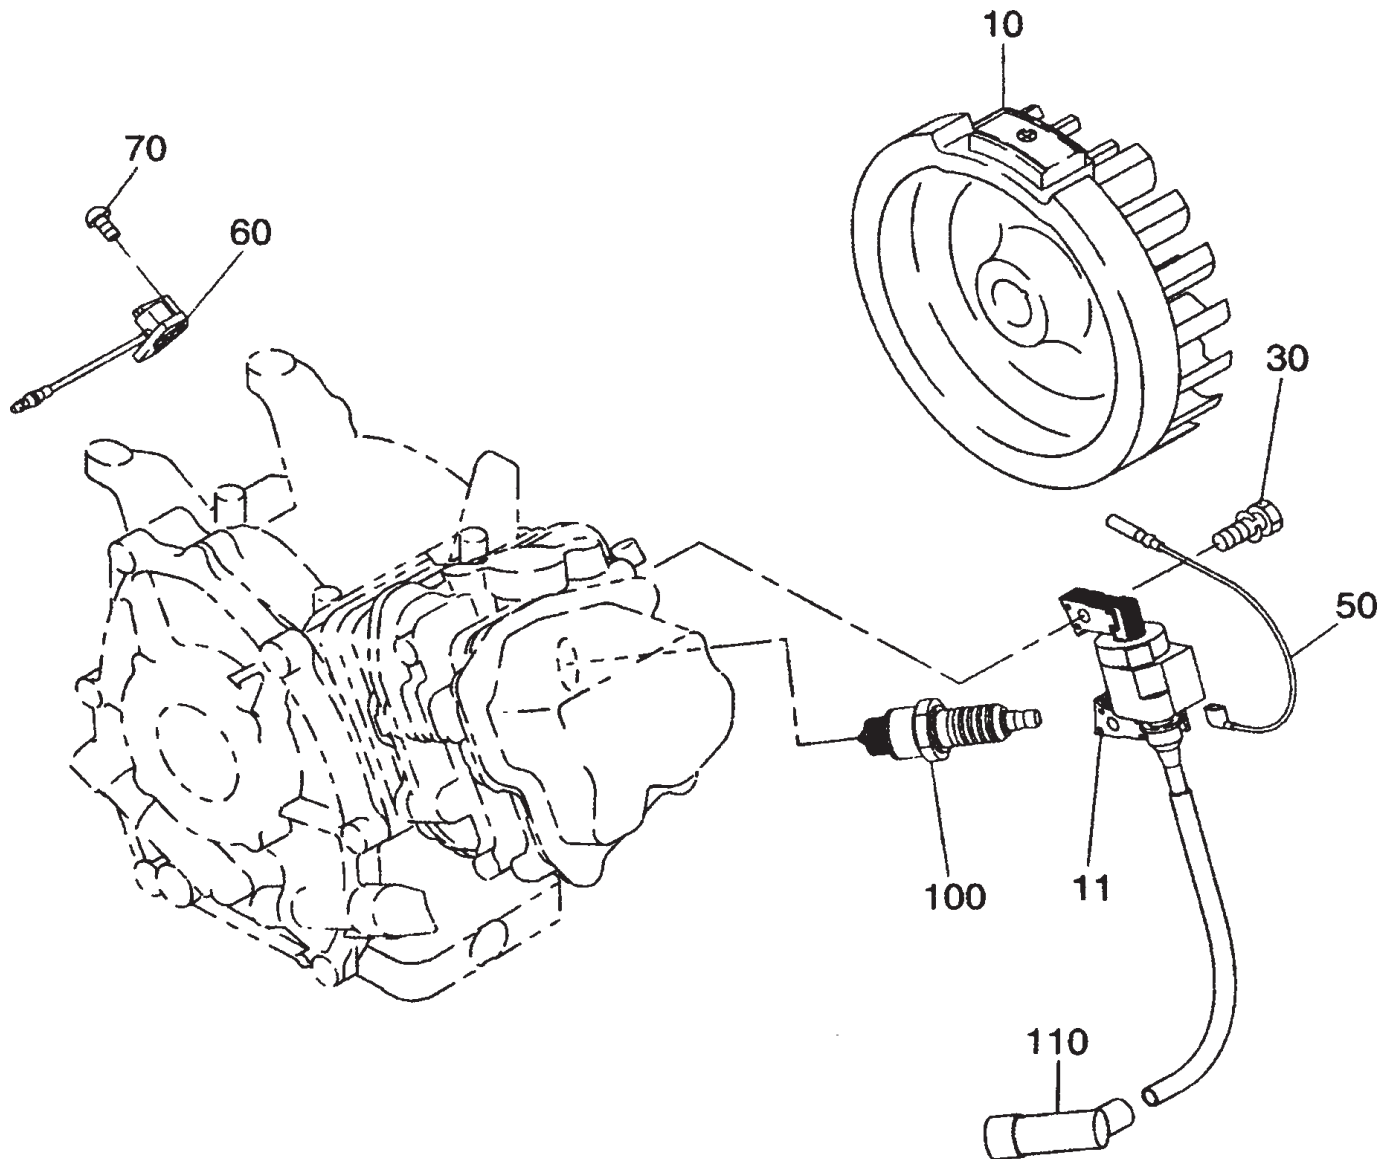


EX-170D40050 — IGNITION COIL/FLYWHEEL ASSY.

ELECTRIC DEVICE ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
10	2777923001	FLYWHEEL	1	
11	2777943011	IGNITION COIL	1	
30	0011406250	BOLT & WASHER	2	
50	2777310101	WIRE 1	1	
60	X660000361	STOP SWITCH ASSY., ON-OFF	1	
70	0150040090	TAPPING SCREW	2	
100	0650140150	SPARK PLUG	1	
110	0655000270	SPARK PLUG CAP	1	

MUFFLER ASSY.

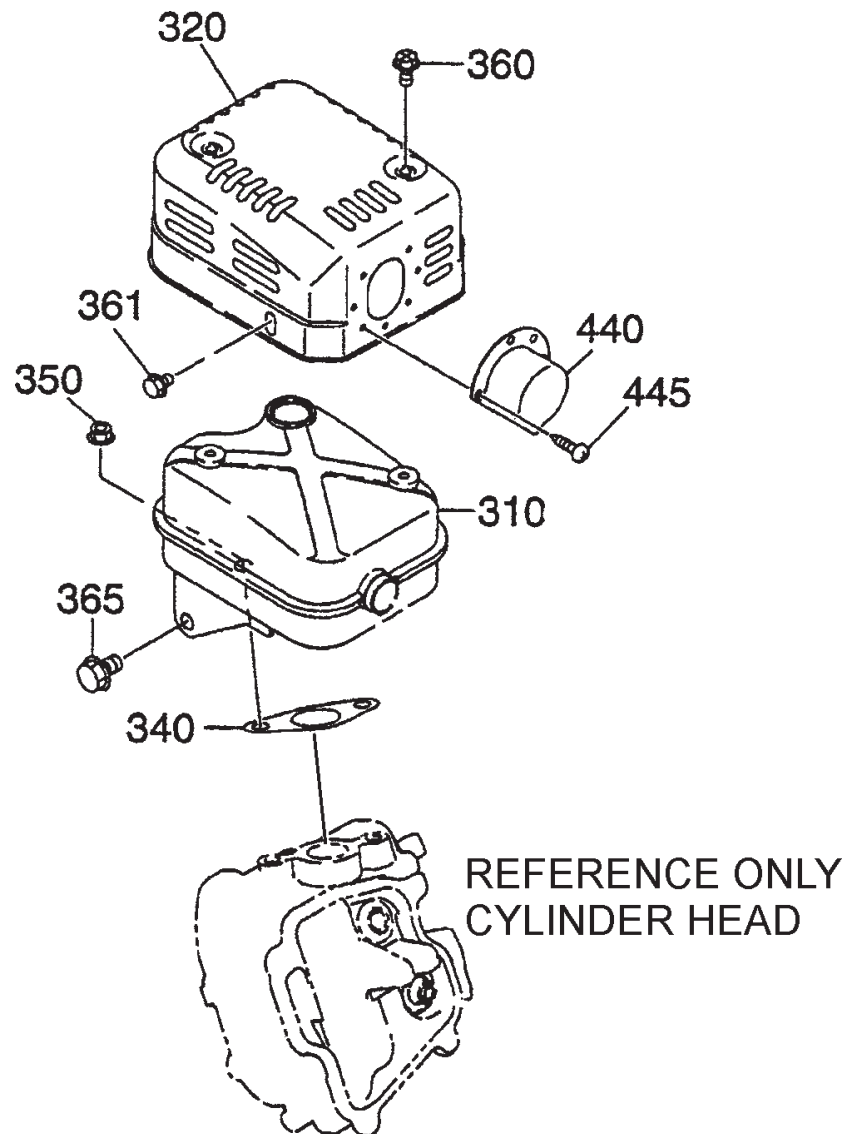


EX-170D40050 — MUFFLER ASSY.

MUFFLER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
310	2773010111	MUFFLER	1	
320	2773420111	MUFFLER COVER	1	
340	2773520103	GASKET, MUFFLER	1	
350	9802008280	FLANGE, NUT	2	
360	0152060090	TAPPING BOLT	2	
361	0110060010	FLANGE BOLT	1	
365	0110080150	FLANGE BOLT	1	
440	2773700101	DEFLECTOR	1	
445	0150040060	TAPPING SCREW	2	

EX-170D40050 — RECOIL STARTER ASSY.

COOLING AND STARTING ASSY.

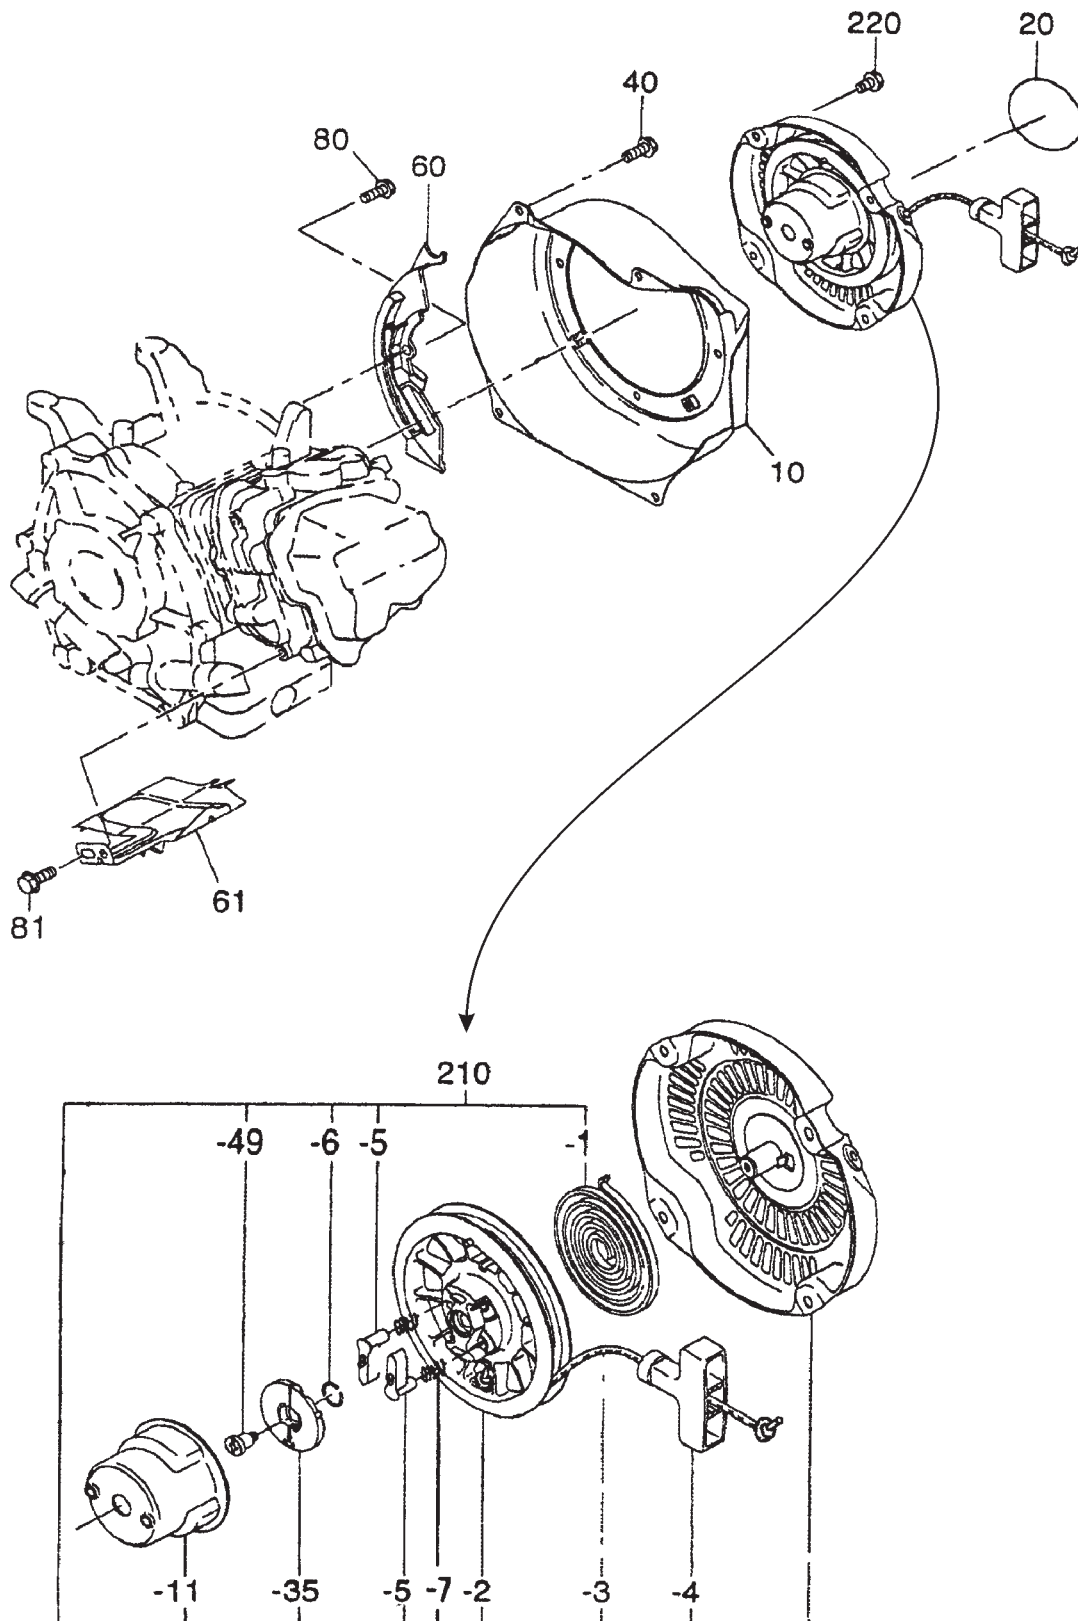

EX-170D40050 — RECOIL STARTER ASSY.

COOLING AND STARTING ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
10	2775120201	BLOWER, HOUSING CP	1	
20	0732005140	LABEL, TRADEMARK	1	
40	0110060030	FLANGE, BOLT	4	
60	2775271111	BAFFLE, CASE 1	1	
61	2775270203	BAFFLE, HEAD 2	1	
80	0010406160	FLANGE, BOLT	1	
81	0110060020	FLANGE, BOLT	1	
210	2695020130	RECOIL STARTER ASSY.	1	INCLUDES ITEMS W/*
210-1*	2705011508	SPIRAL, SPRING	1	
210-2*	2695012008	REEL	1	
210-3*	2825011118	STARTER ROPE	1	
210-4*	2615010008	STARTER KNOB	1	
210-5*	2705012508	RACHET	2	
210-6*	2275013108	FRICTION SPRING	1	
210-7*	2275013508	RETURN SPRING	2	
210-11*	2695014518	STARTER PULLEY	1	
210-35*	2705026108	RACHET GUIDE	1	
210-49*	2275015208	SET SCREW	1	
220	0110060010	FLANGE, BOLT	1	